

Kyocera KR1 Mobile Router

User Guide



Kyocera Wireless Corp.
10300 Campus Point Drive
San Diego, CA 92121 U.S.A.

82-N8362-2EN, Rev.003

Kyocera Wireless Corp Proprietary

The Kyocera Wireless Corp. ("KWC") products described in this manual may include copyrighted KWC and third party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for KWC and third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the KWC products may not be modified, reverse engineered, distributed or reproduced in any manner not permitted by law. Furthermore, the purchase of the KWC products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of KWC or any third party software provider, except for the normal, non-exclusive royalty-free license to use that arises by operation of law in the sale of a product.

Kyocera is a registered trademark of Kyocera Corporation. D-link is a trademark of D-link Systems, Inc. Macintosh is a trademark Apple Computer Inc. Netscape and Netscape Navigator are trademarks of Netscape Communications. All other trademarks are the property of their respective owners.

Copyright © 2006 Kyocera Wireless Corp. All rights reserved.

All data and information contained in or disclosed by this document are confidential and proprietary information of Kyocera Wireless Corp, and all rights therein are expressly reserved. By accepting this material, the recipient agrees that this material and the information contained therein are held in confidence and in trust and will not be used, copied, or reproduced in whole or in part, nor its contents revealed in any manner to others without the express written permission of Kyocera Wireless Corp.

Kyocera Wireless Corp.
10300 Campus Point Drive, San Diego, CA 92121

82-N8362-2EN, Rev. 003

FCC COMPLIANCE STATEMENT

FCC Notice:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution:

The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the warranty and users' authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

Caution:

To comply with the FCC RF exposure compliance requirements, this device must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada Notice:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications of the RSS210.

This class B device complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Table of Contents


1 Introduction	1
Connections–Kyocera KR1 Mobile Router (Back View)	1
LEDs–Kyocera KR1 Mobile Router (Front View)	2
Features	3
2 Package Contents	4
System Requirements for Configuration	4
WiFi System Requirements	4
Verify Package Contents	4
3 Wireless Basics	5
Standards-Based Technology	5
Installation Considerations	6
4 Installation Instructions	7
Connect the Kyocera KR1 Wireless Router to Your Network	7
32-bit PCMCIA (EVDO) Card or 1xEV-DO Mobile Phone Connection	7
Establish WiFi Connection	7
5 Using the Configuration Menu.....	8
Basic > Wizard	9
Basic > Wireless (Security–No Encryption)	10
Basic > Wireless (Security–WEP)	11
Basic > Wireless (Security–WPA-PSK)	12
Basic > WAN (EVDO) > WAN Type	13
Basic > LAN	14
Basic > DHCP	15
Advanced > Virtual Server	16
Advanced > Applications	18
Advanced > Filters > IP Filters	19
Advanced > Filters > MAC Filters	20
Advanced > Firewall	21
Advanced > DMZ	22
Advanced > Performance	23
Advanced > WAN (EVDO)	25
Tools > Admin	26
Tools > Time	27
Tools > System	28
Tools > Firmware	29
Tools > DDNS	30
Tools > Misc	31
Tools > Cable Test	32

Status > Device Info	33
Status > Log	34
Status > Log > Log Settings #2	35
Status > Log > Log Settings #3 A screen will display the Kyocera KR1 Mobile Router log settings.	36
Status > Stats	37
Help > Help Menu	38
6 Troubleshooting	39
1. I am unable to access the Configuration Menu when I use my computer to configure the router. Why?	39
2. My wireless client cannot access the Internet. What should I do?	41
3. What variables may cause my wireless products to lose reception?	41
4. Why does my wireless connection keep dropping?	41
5. I am unable to achieve a wireless connection. Why?	41
6. I forgot my encryption key. What should I do?	42
7. How do I reset my Kyocera KR1 Mobile Router to its factory default settings?	43
8. What is VPN?	43
9. What can I do if my Ethernet cable does not work properly?	44
7 Technical Support	45
Technical Support	45
Kyocera Accessories	45
8 Technical Specifications	46
9 Consumer Limited Warranty (USA only).....	48

1 Introduction


The Kyocera KR1 Mobile Router is a high-performance tool that supports wireless networking at home, work, or in a public place. The Kyocera KR1 Mobile Router supports uses a 32-bit PCMCIA (EVDO) wireless card, or a 1xEV-DO mobile phone, and supports wireless data transfers up to 54 Mbps, and wired data transfers up to 100 Mbps. The Kyocera KR1 Mobile Router is compatible with industry security features.

Connections–Kyocera KR1 Mobile Router (Back View)

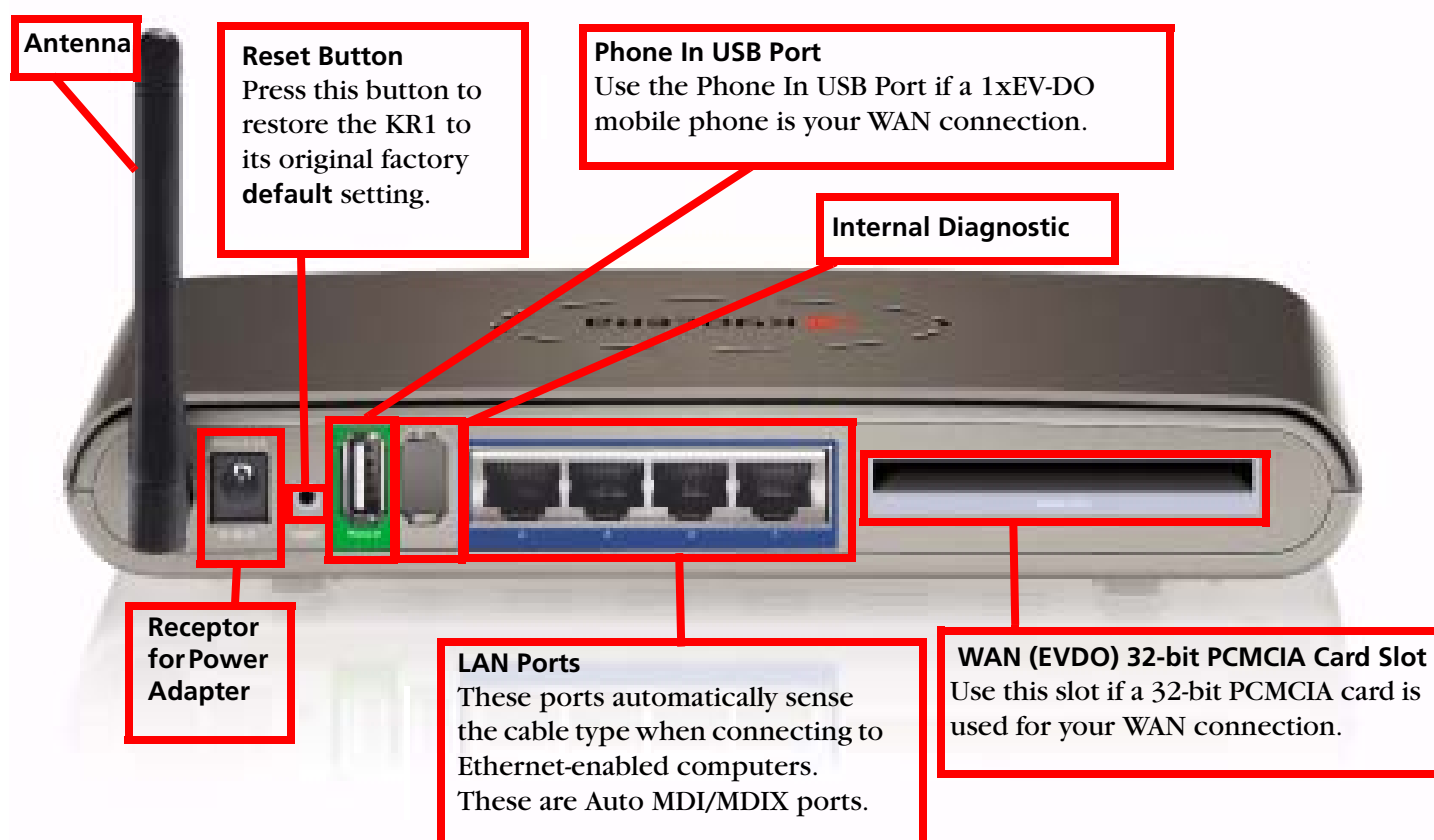

Note: The Kyocera KR1 Mobile Router contains two ports: a “Phone-In” USB Port, and a second internal diagnostic port. Please use *only* the “Phone In” USB port for your 1xEV-DO WAN connections. *The second port is not for customer use. Please do not attempt to use this port.*

LEDs–Kyocera KR1 Mobile Router (Front View)

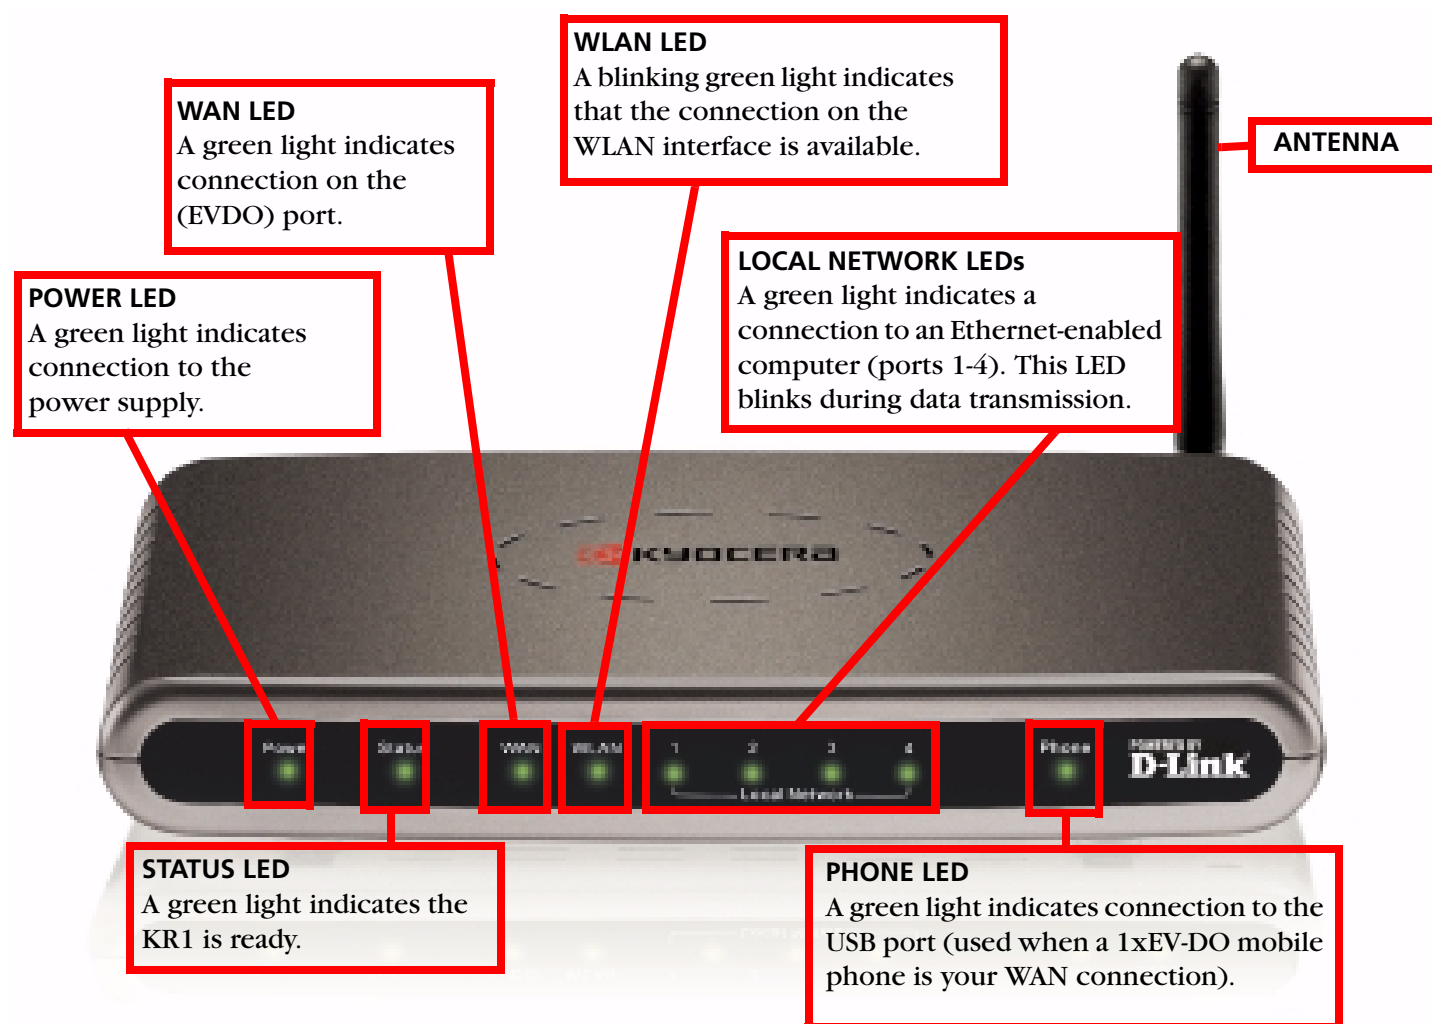

Features

- When used with either 802.11b, or 802.11g, security features include **WPA-PSK: Pre Shared Key Mode**. This mode utilizes a single **Passphrase** of eight to 63 ASCII characters to authenticate users.
- Fully compatible with the 802.11g standard to provide a wireless data transfer rate of up to 54Mbps.
- Backwards compatible with the 802.11b standard to provide a wireless data rate of up to 11Mbps.
- Utilizes **OFDM** technology (**O**rthogonal **F**requency **D**ivision **M**ultiplexing).
- User-friendly configuration and diagnostic utilities.
- Operates in the 2.4GHz frequency range.
- Advanced Firewall features.
- Supports NAT with VPN pass-through, providing added security.
 - MAC Filtering
 - IP Filtering
 - Port Scheduling
- DHCP server enables all networked computers to automatically receive IP addresses.
- Web-based interface for Managing and Configuring.
- Access Control to manage users on the network.
- Supports special applications that require multiple connections.
- Equipped with 4 10/100 Ethernet ports, 1 USB phone port, and 1 WAN (EVDO) 32-bit PCMCIA Card Slot.
- Connects multiple computers to a Broadband (EVDO) modem to share the Internet connection.

Note: The Kyocera KR1 Mobile Router is designed to work with EVDO-capable handsets that can be used as a modem (support tethered data). Please refer to your service provider for detailed feature information. Support is also available at <http://www.kyocera-wireless.com/support>.

2 Package Contents

System Requirements for Configuration

- A compatible 32-bit PCMCIA (EVDO) card *with service*, or a 1xEV-DO mobile phone *with service*.
Note: Subject to services and service terms available from your carrier.
- Computers with Windows, Macintosh, or Linux-based operating systems with an installed Ethernet adapter.
- Internet Explorer version 6.0 or Netscape Navigator version 7.0 and above.

WiFi System Requirements

- A 802.11b, or 802.11g Adapter

Verify Package Contents

The Kyocera KR1 Mobile Router package should contain the items listed below. If any of the items are missing, please contact your reseller.

- Kyocera KR1 Mobile Router
- *Kyocera KR1 Mobile Router User Guide* (CD-ROM)
- *Kyocera KR1 Mobile Router Quick Installation Guide*
- Ethernet patch cable (CAT5 UTP)
- Mounting Kit
- Antenna
- DC 5V, 3.0A Power Adapter
- AC Power Cord

Caution: Using a power supply with a different voltage rating than the one included with the Kyocera KR1 Mobile Router will cause damage and void the warranty for this product.

3 Wireless Basics

The Kyocera KR1 Mobile Router is based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, or business. The Kyocera KR1 Mobile Router allows you to access the data you want, when and where you want it.

A WLAN (wireless local area network) transmits and receives data with radio signals instead of wires. WLANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops, and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility, and the absence of cabling and other fixed infrastructure, have proven beneficial for many users.

Wireless users can use the same applications as those on a wired network. Wireless adapter cards for laptop and desktop systems support the same protocols as Ethernet adapter cards.

People use wireless LAN technology for many different purposes:

Mobility - Productivity increases when people have access to data in any location within the operating range of the WLAN. Management decisions based on real-time information can significantly improve worker efficiency.

Low Implementation Costs - WLANs are easy to set up, manage, change, and relocate. Networks that frequently change can benefit from WLANs ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

Installation and Network Expansion - Installing a WLAN system can be fast and easy, and eliminate the need to pull cable through walls and ceilings. Wireless technology allows the network to go where wires cannot go - even outside the home or office.

Inexpensive Solution - Wireless network devices are as competitively priced as conventional Ethernet network devices.

Standards-Based Technology

The Kyocera KR1 Mobile Router utilizes the 802.11g standard.

The IEEE 802.11g standard is an extension of the 802.11b standard. It increases the data rate up to 54Mbps within the 2.4GHz band, utilizing OFDM technology.

This means that in most environments, within the specified range of this device, you can transfer large files quickly or even watch a movie in MPEG format over your network without noticeable delays. This technology works by transmitting high-speed digital data over a radio wave utilizing **OFDM (Orthogonal Frequency Division Multiplexing)** technology. OFDM splits the radio signal into multiple smaller sub-signals that transmit simultaneously at different frequencies to the receiver. OFDM reduces the amount of crosstalk (interference) in signal transmissions.

The Kyocera KR1 Mobile Router is backwards compatible with 802.11b devices. This means that if you have an existing 802.11b network, the devices in that network are compatible with 802.11g devices at speeds of up to 11Mbps in the 2.4GHz range.

Installation Considerations

The Kyocera KR1 Mobile Router allows you access your network using a wireless connection, from virtually anywhere within its operating range. Keep in mind however, that the number, thickness, and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit this range.

Typical ranges vary depending on the types of materials used, and background RF (radio frequency) noise in your home or business.

To maximize your wireless range, please follow these guidelines:

1. Keep the number of walls and ceilings between the Kyocera KR1 Mobile Router and other network devices to a minimum. Each wall or ceiling can reduce the Kyocera KR1 Mobile Router's range from 3-90 feet (1-30 meters).

Note: The same considerations apply to your broadband EVDO connection.

2. Keep your product aware from electrical devices (such as microwaves, air conditioners, and televisions) that emit large quantities of RFI (Radio Frequency Interference).

4 Installation Instructions

Connect the Kyocera KR1 Wireless Router to Your Network

Note: *Ensure that power to your Kyocera KR1 Mobile Router is not connected before performing the installation steps below.*

32-bit PCMCIA (EVDO) Card or 1xEV-DO Mobile Phone Connection

Note: To preserve the life of your phone's battery, it is recommended that you use your phone's charging cradle when connected to the Kyocera KR1 Mobile Router.

1. Attach the antenna.
 - a. Remove the antenna from its plastic wrapper.
 - b. Screw the antenna in a clockwise direction to the back panel of the unit.
 - c. Once secured, position the antenna upward at its connecting joint. This will ensure optimal reception.
2. Connect a compatible 32-bit PCMCIA (EVDO) card *with service*, or 1xEV-DO mobile phone *with service*, to the Kyocera KR1 Mobile Router in one of the following ways:
 - a. Insert your wireless 32-bit PCMCIA (EVDO) card into the WAN (EVDO) 32-bit PCMCIA Card Slot, or
 - b. Connect your wireless 1xEV-DO mobile phone to the "Phone In" jack, with your USB phone cable.

Note: The Kyocera KR1 Mobile Router is designed to work with EVDO-capable handsets that can be used as a modem (support tethered data). Please refer to your service provider for detailed feature information. Support is also available at <http://www.kyocera-wireless.com/support>.

3. Insert the Ethernet patch cable into LAN Port 1 on the back panel of the Kyocera KR1 Mobile Router, and an available Ethernet port on the network adapter in the computer you will use to configure the unit.

Note: The Kyocera KR1 Mobile Router LAN Ports are "Auto-MDI/MDIX." This provides either patch or crossover Ethernet cable LAN Port access.

4. Connect the power adapter to the receptor on the back panel of your Kyocera KR1 Mobile Router. Then plug the other end of the power adapter into a wall outlet or power strip.
 - a. The Power LED will turn ON to indicate power has been applied.
 - b. Other LEDs will flash ON and OFF as the Kyocera KR1 Mobile Router performs initialization and Internet connection processes. This will take a few minutes.
 - c. When complete, the following LEDs will illuminate green: Power, Status, WAN, WLAN, and LAN Port 1 (or your specific LAN Port connection).

Note: For 1xEV-DO Phone Users if you have connected a 1xEV-DO mobile phone to your Kyocera KR1 Mobile Router, the Phone LED will also illuminate green.

Establish WiFi Connection

If you selected either **WEP** or **WPA-PSK** encryption, ensure these settings match your WiFi adapter settings. WiFi and encryption settings must match for access to the Kyocera KR1 Mobile Router Configuration Menu, and the Internet. Please refer to your WiFi adapter documentation for additional information.


5 Using the Configuration Menu

Once properly configured, the Kyocera KR1 Mobile Router will obtain and assign IP address information automatically. Configuration settings can be established through the Kyocera KR1 Mobile Router Configuration Menu. You can access this interface by performing the steps listed below:

1. Open a web-browser to <http://www.kyocera-wireless.com>, (or your favorite web browser).
2. Type in the **IP Address** of the Kyocera KR1 Mobile Router (**<http://192.168.0.1>**)

Note: If you have changed the **default** IP Address assigned to the Kyocera KR1 Mobile Router, ensure you enter the correct IP Address now.

3. Type **admin** in the **User Name** field.
4. Leave the **Password** blank.
5. Click **OK**.

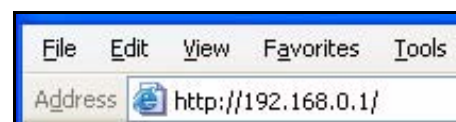

Basic > Wizard

The **Basic>Wizard Type** screen will appear. Refer to the *Kyocera KR1 Mobile Router Quick Installation Guide* for more information regarding the Setup Wizard.



These buttons appear on many of the configuration screens in this section. Please click on the appropriate button at the bottom of each screen after you make a configuration change.



Clicking **Apply** saves changes made to the page.



Clicking **Cancel** clears changes made to the page.



Clicking **Help** brings up helpful information regarding the page.



Clicking **Restart** restarts the router. (Necessary for some changes.)


Basic > Wireless (Security-No Encryption)

Wireless Mode- **Enabled** is the **default** . Selecting this option will allow you to set your Wireless Access Point (WAP) settings. Selecting **Disabled**, will grey-out all **Security** radio buttons (please see “**Security**” below).

SSID- Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory **default** setting is **KR1**. The SSID can be easily changed to establish a new wireless network.
(Note: SSID names may contain up to 32 ASCII characters).

Channel- **Auto Select** is the **default** . Devices on the network must share the same channel. (Note: Wireless adapters automatically scan and match the wireless settings. You may also select the channel you wish to use).

Security- You may select from three levels of encryption to secure your wireless network:
No Encryption, WEP, or WPA-PSK.

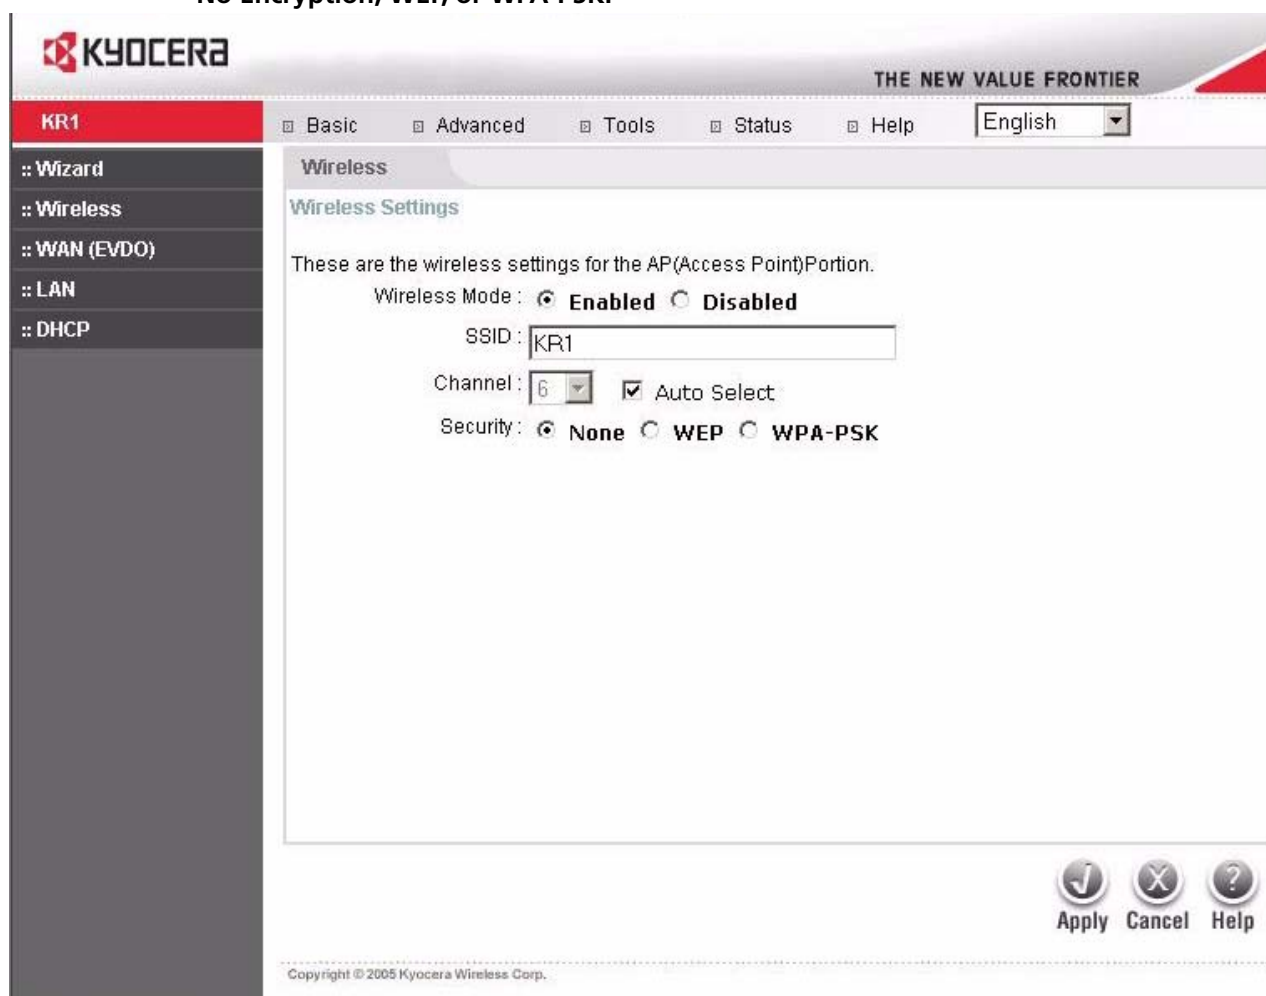


The screenshot shows the Kyocera KR1 Mobile Router web interface. The top navigation bar includes the Kyocera logo, the slogan "THE NEW VALUE FRONTIER", and a language dropdown menu set to "English". Below the navigation bar, there are tabs for "Basic", "Advanced", "Tools", "Status", and "Help". The left sidebar contains a list of configuration options: "KR1", "Wizard", "Wireless", "WAN (EVDO)", "LAN", and "DHCP". The main content area is titled "Wireless" and "Wireless Settings". It contains the text "These are the wireless settings for the AP(Access Point)Portion." and the following settings:

- Wireless Mode:** ☒ **Enabled** ☐ **Disabled**
- SSID:**
- Channel:** ☒ **Auto Select**
- Security:** ☒ **None** ☐ **WEP** ☐ **WPA-PSK**

At the bottom right of the settings area, there are three buttons: "Apply", "Cancel", and "Help". At the bottom left, there is a copyright notice: "Copyright © 2005 Kyocera Wireless Corp."

Security- **No Encryption** is the **default** (as shown in the screen above).

Basic > Wireless (Security-WEP)

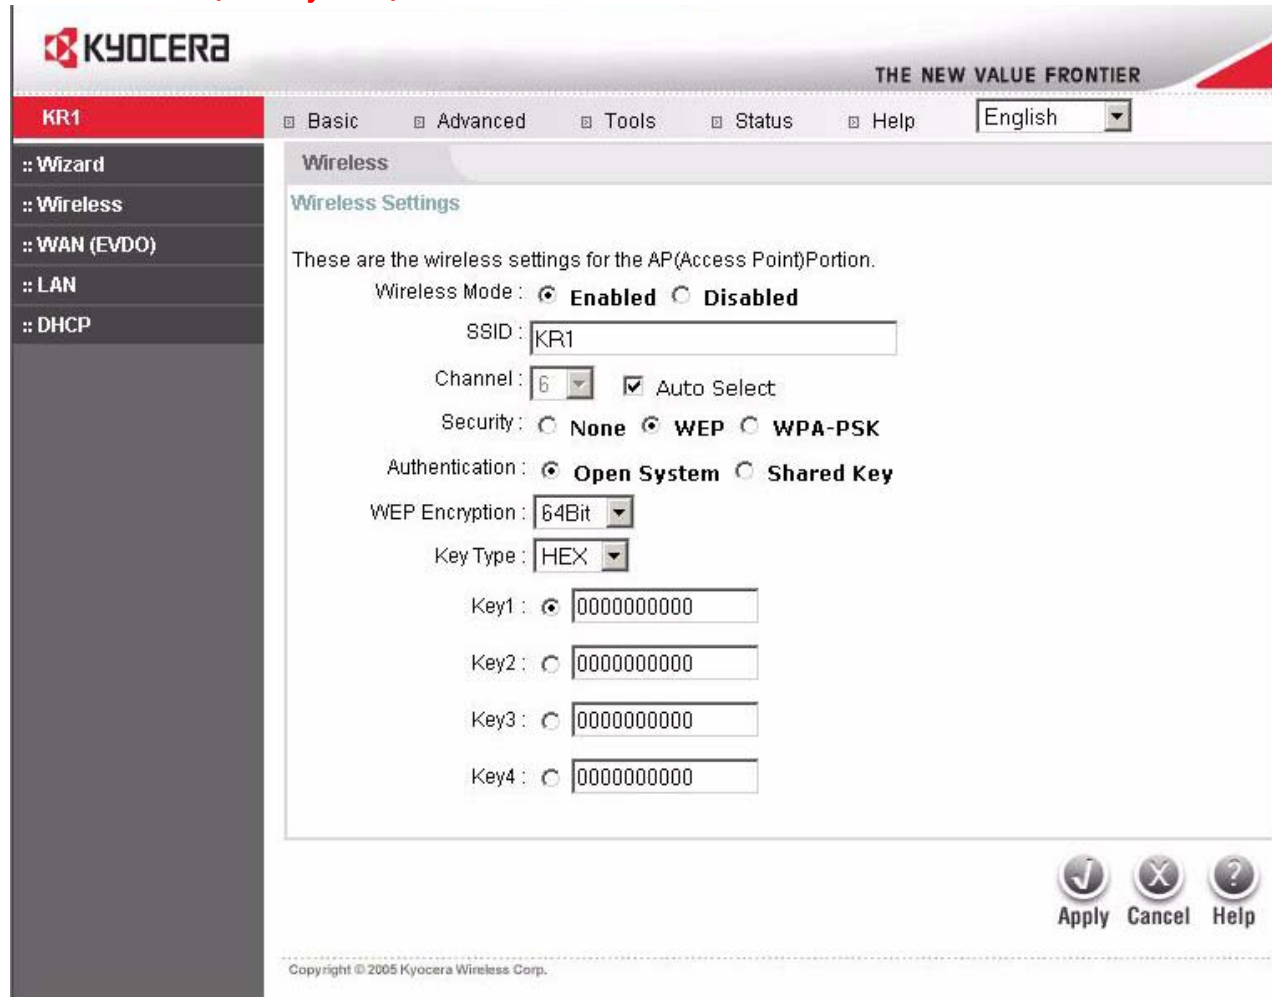

KYOCERA THE NEW VALUE FRONTIER

KR1 Basic Advanced Tools Status Help English

Wireless

Wireless Settings

These are the wireless settings for the AP(Access Point)Portion.

Wireless Mode : ☒ Enabled ☐ Disabled

SSID : KR1

Channel : 6 ☒ Auto Select

Security : ☐ None ☒ WEP ☐ WPA-PSK

Authentication : ☒ Open System ☐ Shared Key

WEP Encryption : 64Bit

Key Type : HEX

Key1 : ☒ 0000000000

Key2 : ☐ 0000000000

Key3 : ☐ 0000000000

Key4 : ☐ 0000000000

Apply Cancel Help

Copyright © 2005 Kyocera Wireless Corp.

Security- WEP

Authentication-

You may select **Open System**, or **Shared Key**. The default is **Open System**. If you select **Open System**, your network will not be secure. Select **Shared Key** to create a secure network authentication between your WLAN host and the Kyocera KR1 Mobile Router. To enable this setting, provide a ten-character (alpha-numeric) key in the **ASCII Key** field.

WEP Encryption-

Two levels of wireless encryption are available: **64-bit**, and **128 bit**. You may change the encryption setting for a more secure wireless connection.


Key Type-

Select **4HEX** or **ASCII**.

Key1-Key4-

Input up to 4 WEP keys; select the one you want to use.

Basic > Wireless (Security-WPA-PSK)

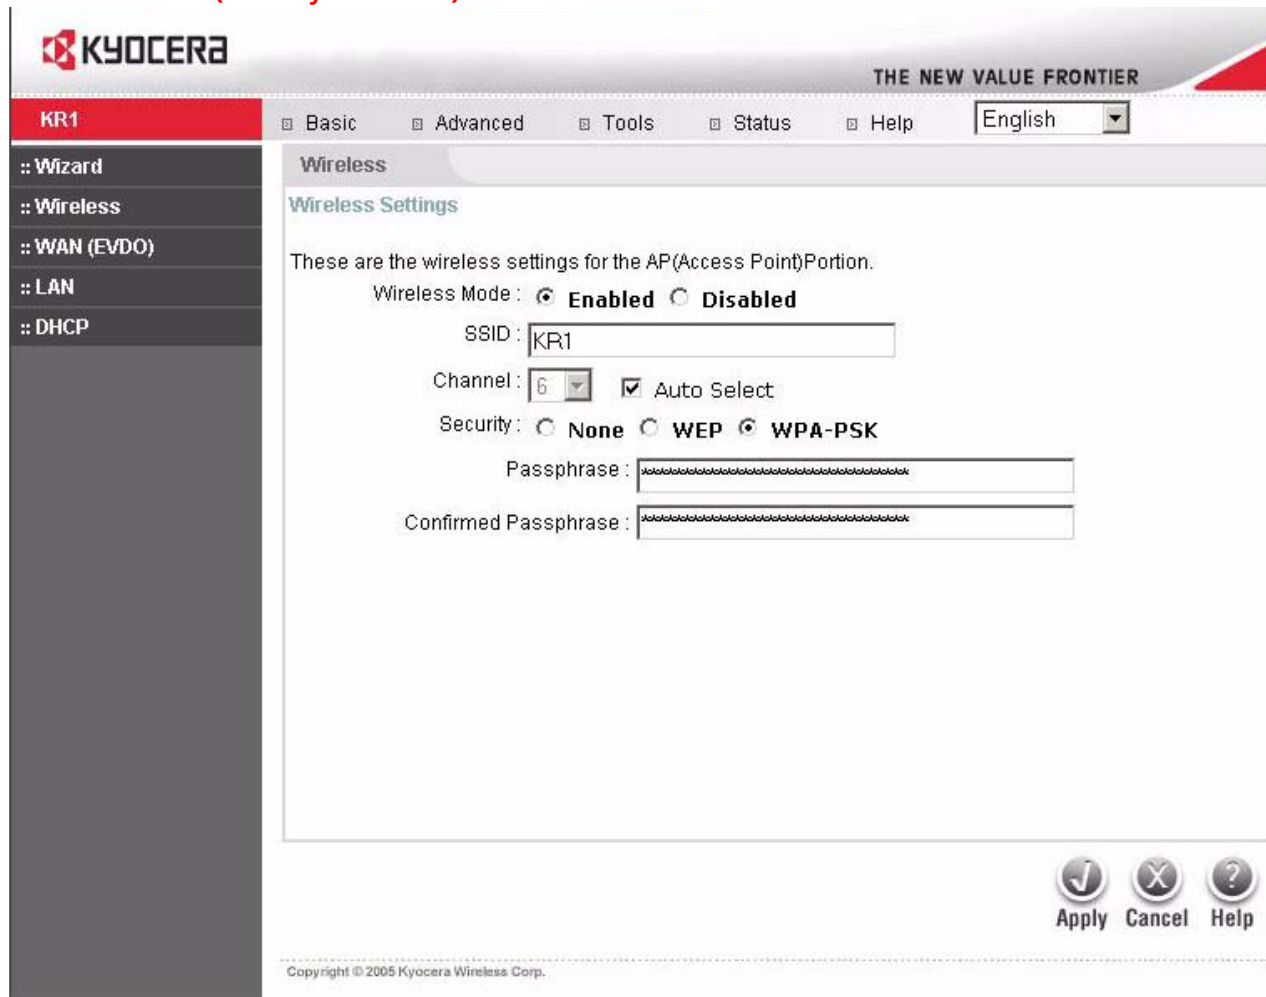

KYOCERA THE NEW VALUE FRONTIER

KR1 Basic Advanced Tools Status Help English

Wireless

Wireless Settings

These are the wireless settings for the AP(Access Point)Portion.

Wireless Mode : ☒ Enabled ☐ Disabled

SSID :

Channel : ☒ Auto Select

Security : ☐ None ☐ WEP ☒ WPA-PSK

Passphrase :

Confirmed Passphrase :

Apply Cancel Help

Copyright © 2005 Kyocera Wireless Corp.

Security- WPA-PSK.


WPA-PSK authenticates users based on a **Passphrase**. The **default** setting does not contain a **Passphrase**.

Passphrase- To enable your WPA-PSK, enter your eight to 63 alpha-numeric **Passphrase**.

Confirm Passphrase- Enter your **Passphrase** again to secure your wireless network.

Note: *Some older WiFi adapters may not support WPA-PSK.*

Basic > WAN (EVDO) > WAN Type

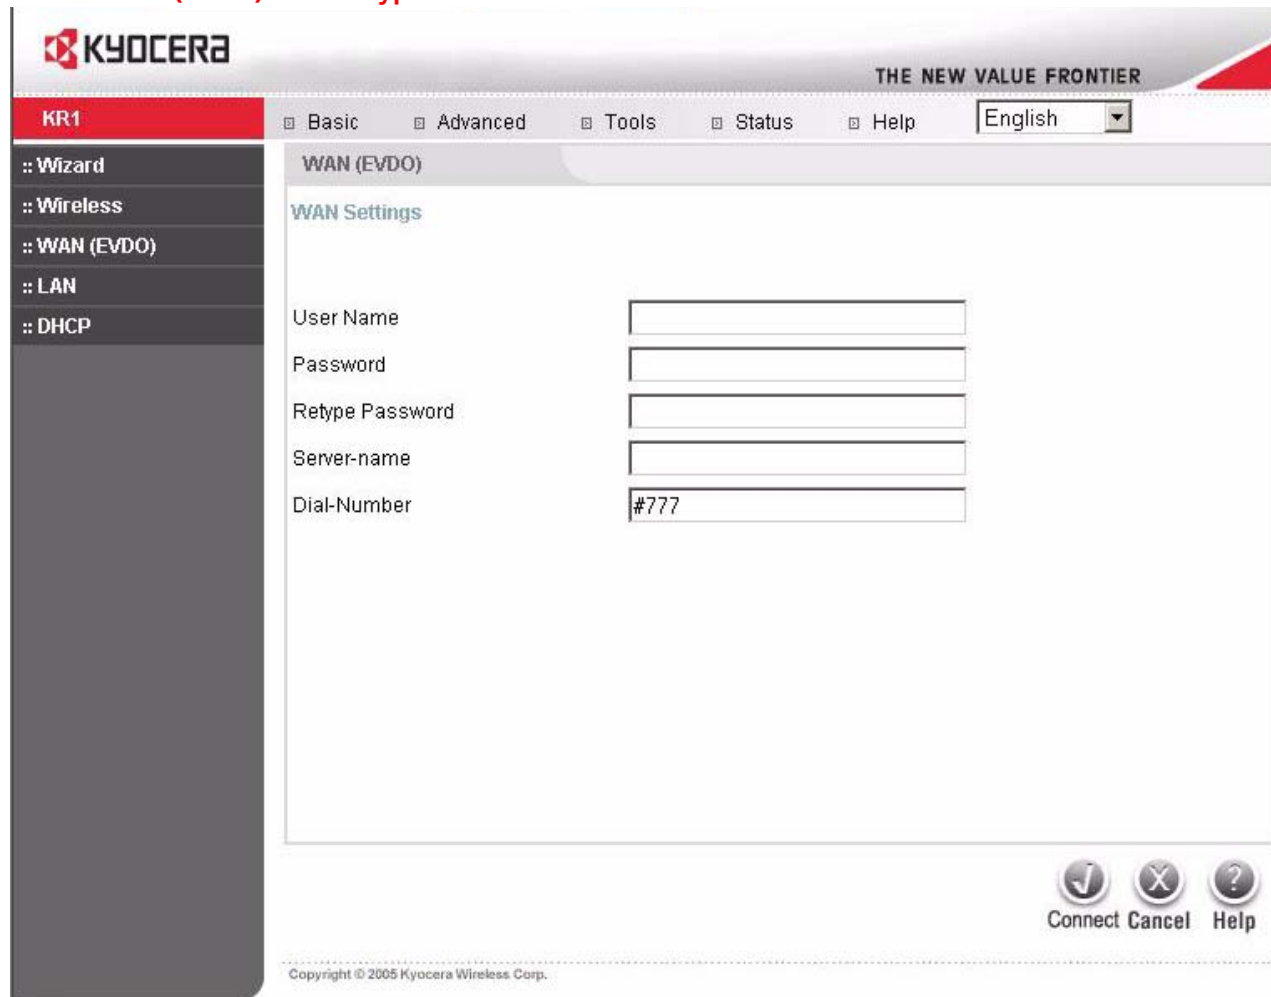

KYOCERA THE NEW VALUE FRONTIER

KR1 Basic Advanced Tools Status Help English

WAN (EVDO)

WAN Settings

User Name

Password

Retype Password

Server-name

Dial-Number

Connect Cancel Help


Copyright © 2005 Kyocera Wireless Corp.

Caution for WAN (EVDO) Networking: The WAN (EVDO) fields may not be necessary for your connection. The information on this page will only be used when your service provider requires you to enter a **User Name** and **Password** to connect to the EVDO network.

Please refer to your EVDO documentation or service provider for additional information.

- User Name-** Enter the new **User Name** for your PC card here.
- Password-** Enter the new **Password** for your PC card here.
- Retype Password-** Enter your **Password** again for confirmation.
- Server-name-** Enter the name of your network server (optional).
- Dial-Number-** The default is #777. This field should not be altered except when required by your service provider.

Basic > LAN

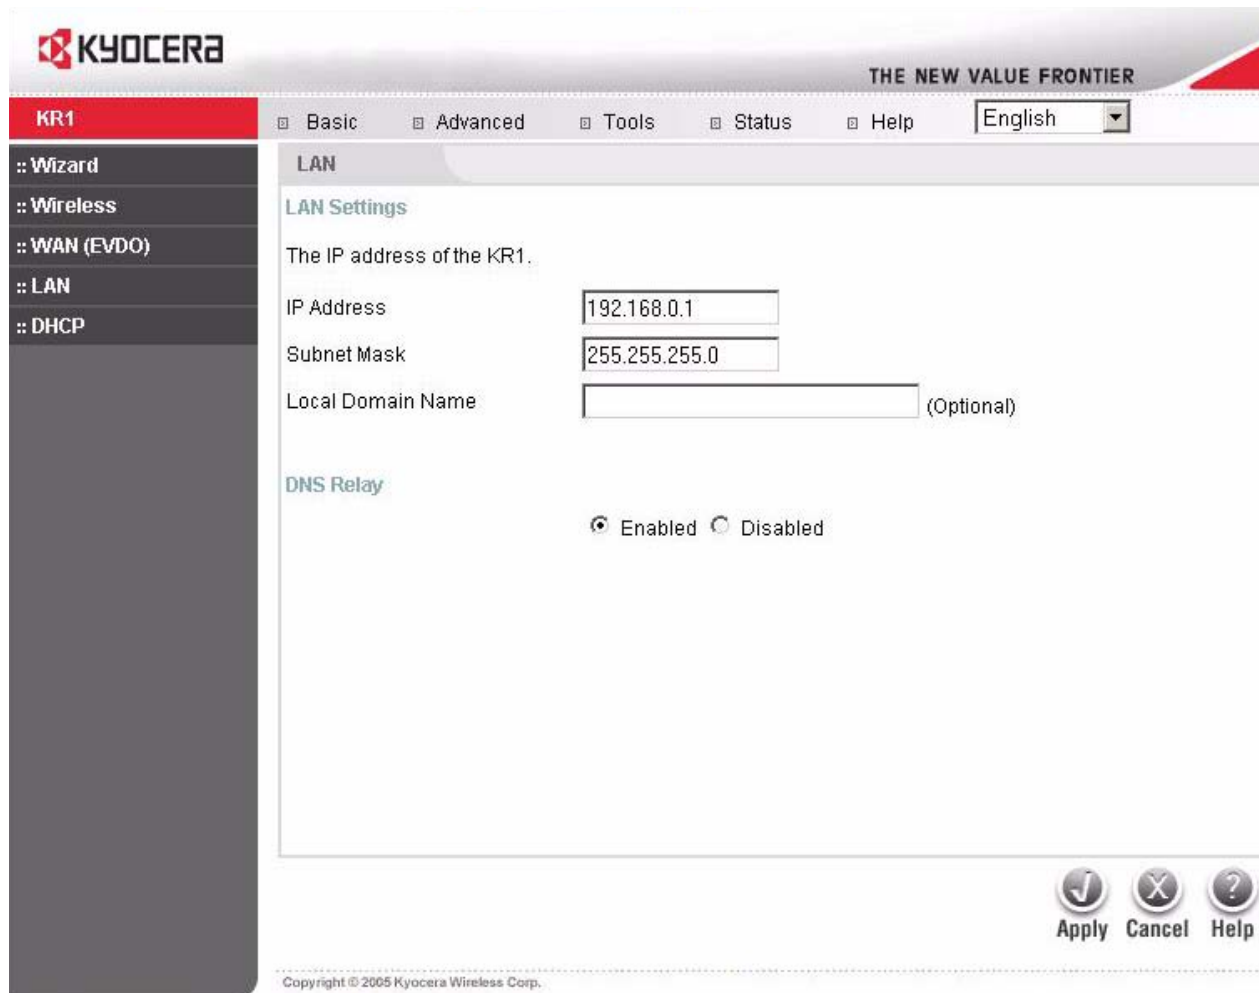

KYOCERA THE NEW VALUE FRONTIER

KR1 Basic Advanced Tools Status Help English

LAN

LAN Settings

The IP address of the KR1.

IP Address

Subnet Mask

Local Domain Name (Optional)

DNS Relay

☒ Enabled ☐ Disabled

Apply Cancel Help


Copyright © 2005 Kyocera Wireless Corp.

LAN is short for Local Area Network, and is considered your internal network. These are the IP settings of the LAN interface for the Kyocera KR1 Mobile Router, and they may be referred to as Private settings. You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet.

Note: There are 254 addresses available on the Kyocera KR1 Mobile Router when using a 255.255.255.0 (Class C) subnet. Example: The router's IP address is 192.168.0.1. The available client IP range is 192.168.0.2 through 192.168.0.254.

- IP Address-** The IP address of the LAN interface. The **default** IP address is: **192.168.0.1**
- Subnet Mask-** The subnet mask of the LAN interface. The **default** subnet mask is **255.255.255.0**
- Local Domain-** This field is optional. Enter in the local domain name.

Basic > DHCP

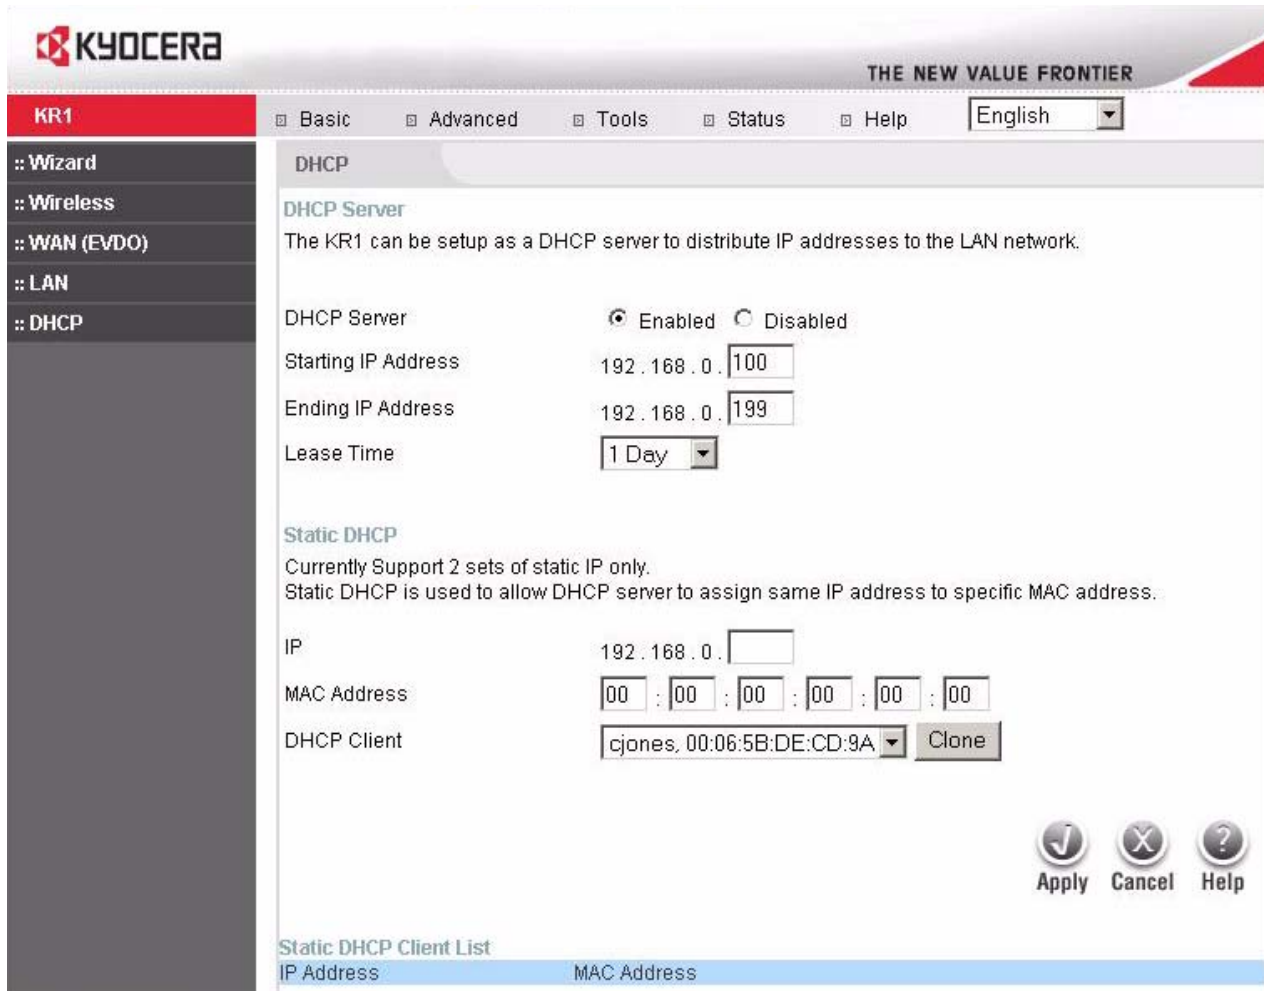

The screenshot shows the configuration page for the DHCP server on a Kyocera KR1 Mobile Router. The interface includes a sidebar with navigation options like Wizard, Wireless, WAN (EVDO), LAN, and DHCP. The main content area is titled 'DHCP' and contains sections for 'DHCP Server' and 'Static DHCP'. The 'DHCP Server' section has radio buttons for 'Enabled' (selected) and 'Disabled', and input fields for 'Starting IP Address' (192.168.0.100), 'Ending IP Address' (192.168.0.199), and 'Lease Time' (1 Day). The 'Static DHCP' section includes an 'IP' field (192.168.0.), a 'MAC Address' field (00:00:00:00:00:00), and a 'DHCP Client' dropdown menu showing 'cjones, 00:06:5B:DE:CD:9A' with a 'Clone' button. At the bottom, there is a 'Static DHCP Client List' table with columns for 'IP Address' and 'MAC Address'. Navigation buttons 'Apply', 'Cancel', and 'Help' are located at the bottom right.

DHCP stands for Dynamic Host Control Protocol. The Kyocera KR1 Mobile Router has a built-in DHCP server, which automatically assigns an IP address to the computers on the LAN/private network. Be sure to set your computers to be DHCP clients by setting their TCP/IP settings to "Obtain an IP Address Automatically." When you turn your computers on, they automatically load the proper TCP/IP settings provided by the Kyocera KR1 Mobile Router. The DHCP Server automatically allocates an unused IP address from the IP address pool to the requesting computer. You must specify the starting and ending address of the IP address pool.

- DHCP Server-** Select **Enabled** or **Disabled**. The **default** setting is **Enabled**.
- Starting IP Address-** The starting IP address for the DHCP server's IP assignment.
- Ending IP Address-** The ending IP address for the DHCP server's IP assignment.
- Lease Time-** The length of time for the IP lease. Enter the Lease time. The **default** setting is one day.

Advanced > Virtual Server

KYOCERA THE NEW VALUE FRONTIER

English

Basic Advanced Tools Status Help

Virtual Server

Virtual Server is used to allow Internet users access to LAN services.

☐ Enabled ☒ Disabled

Name Clear

Private IP

Protocol Type

Private Port ~

Public Port ~

Schedule ☒ Always

☐ From Time : AM To : AM

Day To

Apply Cancel Help

Name	Private IP	Protocol	Schedule
Virtual Server FTP	0.0.0.0	TCP 21/21	always
Virtual Server HTTP	0.0.0.0	TCP 80/80	always
Virtual Server HTTPS	0.0.0.0	TCP 443/443	always

The Kyocera KR1 Mobile Router can be configured as a virtual server so that remote users accessing Web or FTP services via the public IP address can be automatically redirected to local servers in the LAN (Local Area Network).

The Kyocera KR1 Mobile Router firewall feature filters out unsolicited packets to protect your LAN network so all computers networked with the Kyocera KR1 Mobile Router are invisible to the outside world. If you wish, you can make some of the LAN computers accessible from the Internet by enabling Virtual Server. Depending on the requested service, the Kyocera KR1 Mobile Router redirects the external service request to the appropriate server within the LAN network.

The Kyocera KR1 Mobile Router is also capable of port-redirection, meaning incoming traffic to a particular port may be redirected to a different port on the server computer.

Each virtual service created is listed at the bottom of the screen in the Virtual Servers List. There are pre-defined virtual services already in the table. You may use them by enabling them and assigning the server IP to use that particular virtual service.

Virtual Server- Select **Enabled** or **Disabled**. The **default** setting is **Disabled**.

Name- Enter the name referencing the virtual service.

Private IP- The server computer in the LAN (Local Area Network) that provides the virtual services.

Protocol Type- The protocol used for the virtual service.

Private Port- The port number of the service used by the Private IP computer.

- Public Port-** The port number on the WAN (Wide Area Network) side that is used to access the virtual service.
- Schedule-** The schedule of time when the virtual service gets enabled. The schedule may be set to **Always**, which allows the particular service to always be enabled. If it is set to **Time**, select the time frame for the service to be enabled. If the system time is outside of the scheduled time, the service is disabled.

Example #1: If you have a Web server that you wanted Internet users to access at all times, you would need to enable it.

Web (HTTP) server is on LAN (Local Area Network) computer

192.168.0.25. HTTP uses port 80, TCP.

Name: Web Server

Private IP: 192.168.0.25


Protocol Type: TCP

Private Port: 80

Public Port: 80

Schedule: always

Virtual Servers List

Name	Private IP	Protocol	Schedule
<input checked="" type="checkbox"/> Virtual Server HTTP	192.168.0.25	TCP 80/80	always 



Click on this icon to edit the virtual service



Click on this icon to delete the virtual service

Example #2: If you have an FTP server that you wanted Internet users to access by WAN port 2100 and only during the weekends, you would need to enable it as such. FTP server is on LAN computer 192.168.0.30. FTP uses port 21, TCP.

Name: FTP Server

Private IP: 192.168.0.30

Protocol Type: TCP

Private Port: 21

Public Port: 2100

Schedule: From: 01:00AM to 01:00AM, Sat to Sun

All Internet users who want to access this FTP Server must connect to it from port 2100. This is an example of port redirection and can be useful in cases where there are many of the same servers on the LAN network.

Advanced > Applications

KYOCERA THE NEW VALUE FRONTIER

Basic Advanced Tools Status Help English

KR1

- Virtual Server
- Applications
- Filters
- Firewall
- DMZ
- Performance
- WAN (EVDO)

Applications

Special Application

Special Application is used to run applications that require multiple connections.

☐ Enabled ☒ Disabled

Name

Trigger Port -

Trigger Type

Public Port

Protocol Type

Special Applications List

Name	Trigger	Public
<input type="checkbox"/> Battle.net	Both/6112-6112	Both/6112
<input type="checkbox"/> Dialpad	Both/7175-7175	Both/51200-51210
<input type="checkbox"/> ICU II	Both/2019-2019	Both/2000-2085
<input type="checkbox"/> MSN Gaming Zone	TCP/6667-6667	TCP/28800-29000
<input type="checkbox"/> PC-to-Phone	TCP/12053-12053	TCP/12120-12122
<input type="checkbox"/> Quick Time 4	TCP/554-554	UDP/6970-6999

Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications have difficulties working through NAT (Network Address Translation). Special Applications makes some of these applications work with the Kyocera KR1 Mobile Router. If you need to run applications that require multiple connections, specify the port normally associated with an application in the "Trigger Port" field, select the protocol type as TCP or UDP, then enter the public ports associated with the trigger port to open them for inbound traffic.

The Kyocera KR1 Mobile Router provides some predefined applications in the table on the bottom of the web page. Select the application you want to use and enable it.

Note: Only one PC can use each Special Application tunnel.

Name- This is the name referencing the special application.


Trigger Port- This is the port used to trigger the application. It can be either a single port or a range of ports.

Trigger Type- This is the protocol used to trigger the special application. By **default** the Trigger Type is **TCP**.

Public Port- This is the port number on the WAN side that is used to access the application. You may define a single port or a range of ports. You can use a comma to add multiple ports or port ranges.

Protocol Type- This is the protocol used for the special application. By **default** the Trigger Type is **TCP**.

Advanced > Filters > IP Filters

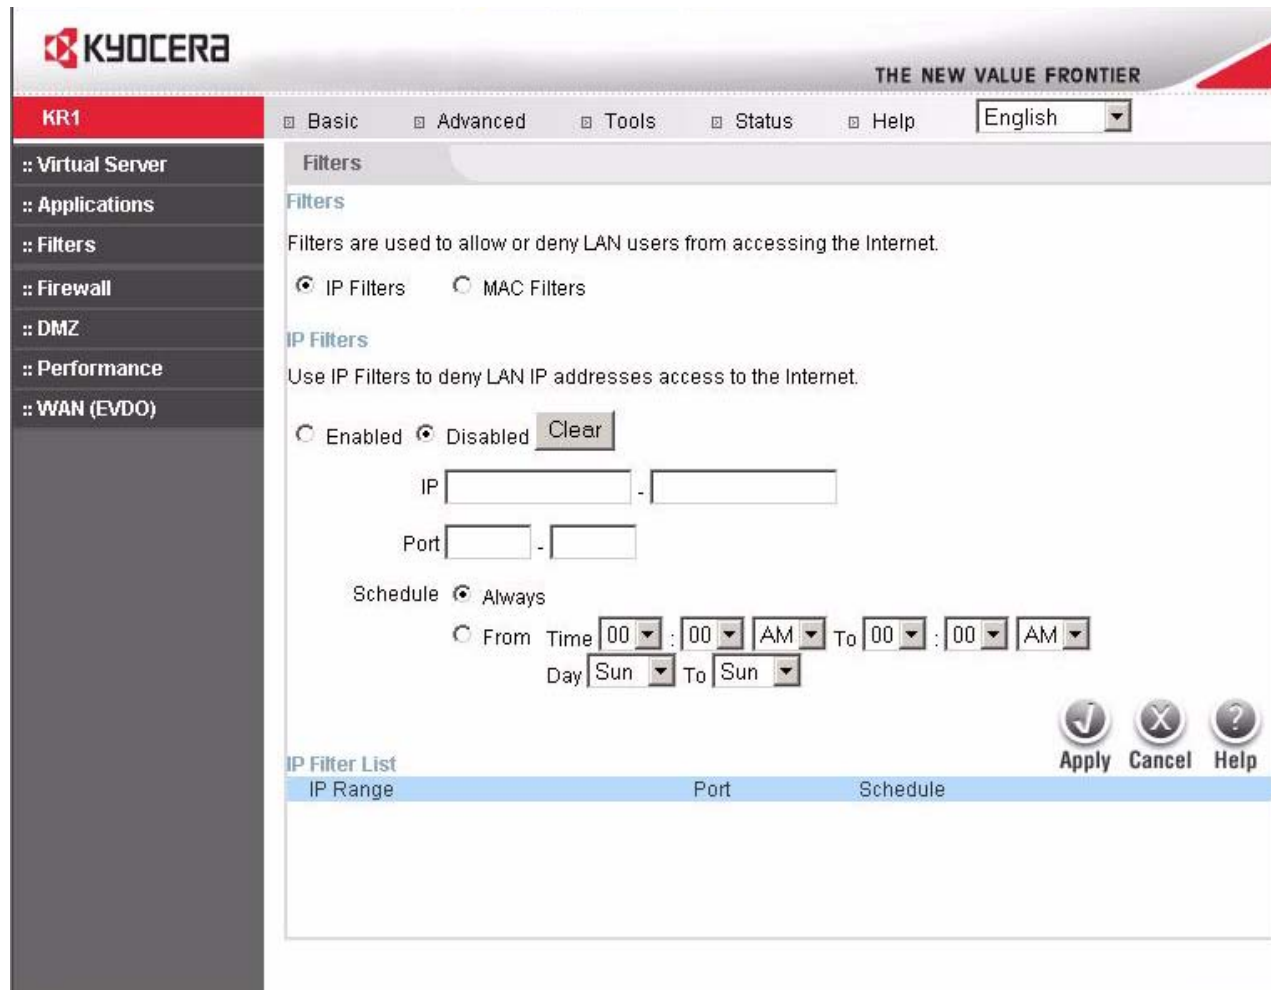

The screenshot shows the Kyocera KR1 Mobile Router configuration interface. The left sidebar contains a navigation menu with options: Virtual Server, Applications, Filters (selected), Firewall, DMZ, Performance, and WAN (EVDO). The main content area is titled 'Filters' and includes a sub-section 'IP Filters'. The 'IP Filters' section has a description: 'Use IP Filters to deny LAN IP addresses access to the Internet.' Below this, there are radio buttons for 'Enabled' and 'Disabled' (selected), and a 'Clear' button. There are input fields for 'IP' and 'Port', each with a range selector. A 'Schedule' section has radio buttons for 'Always' (selected) and 'From Time'. The 'From Time' section includes dropdowns for 'Time' (00:00 AM) and 'To' (00:00 AM), and 'Day' (Sun) and 'To' (Sun). At the bottom right, there are 'Apply', 'Cancel', and 'Help' buttons. Below the configuration options is an 'IP Filter List' table with columns for 'IP Range', 'Port', and 'Schedule'.

Filters- Filters are used to deny or allow LAN (Local Area Network) computers from accessing the Internet. The Kyocera KR1 Mobile Router can be setup to deny internal computers by their IP or MAC addresses. The Kyocera KR1 Mobile Router can also block users from accessing restricted web sites. By **default** the Filters is **IP Filters**.


IP Filters- Use IP Filters to deny LAN IP addresses from accessing the Internet. You can deny specific port numbers or all ports for the specific IP address. By **default** the IP Filters is **Disabled**.

IP- The IP address of the LAN computer that is denied access to the Internet.

Port- The single port or port range that is denied access to the Internet.

Schedule- This is the schedule of time when the IP Filter gets enabled. By **default** the Schedule is **Always**.

Advanced > Filters > MAC Filters

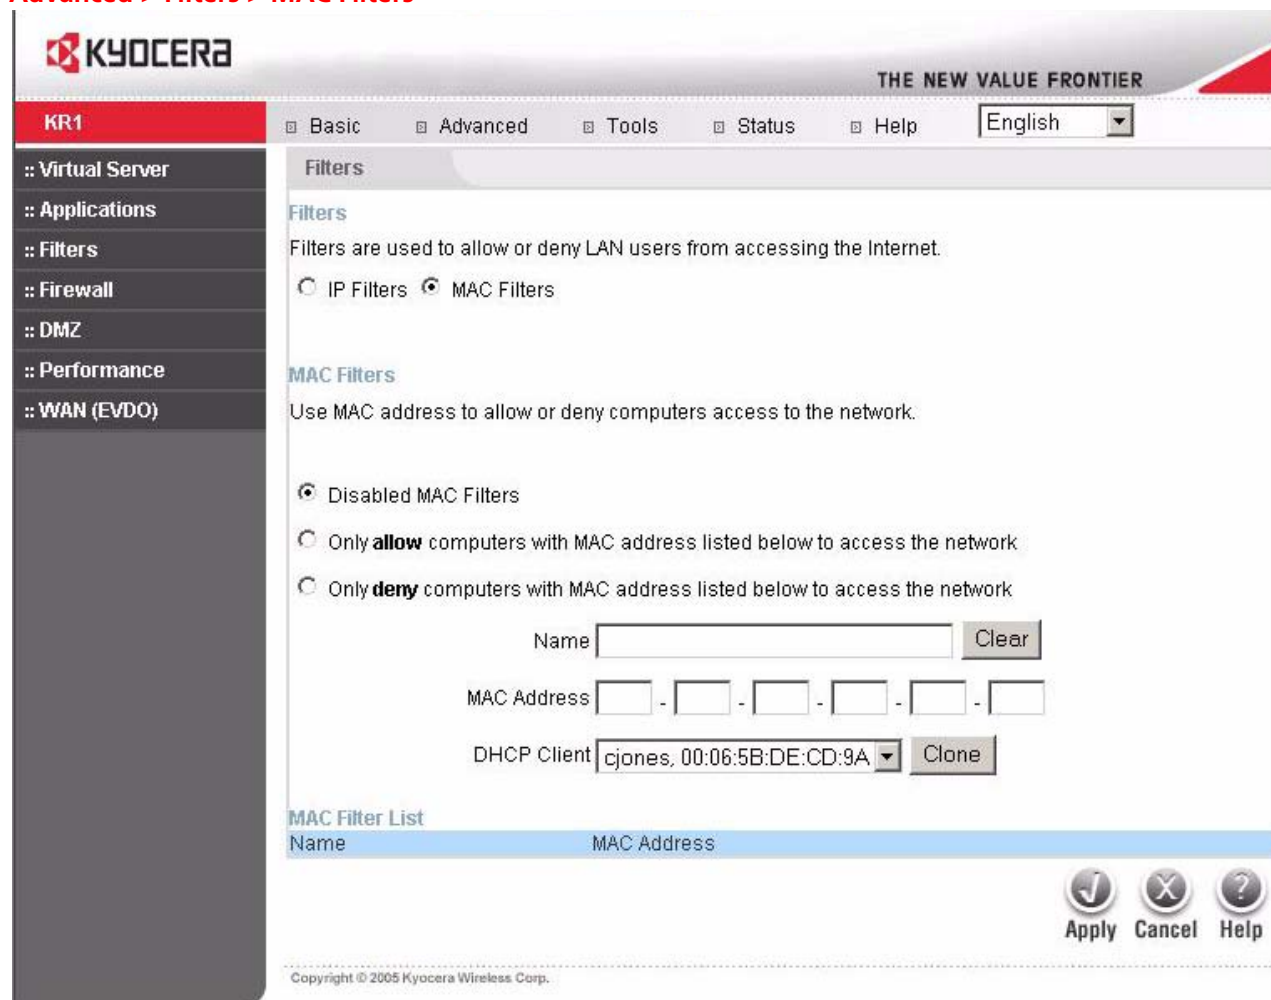

The screenshot shows the Kyocera KR1 Mobile Router web interface. The top navigation bar includes links for Basic, Advanced, Tools, Status, and Help, along with a language dropdown set to English. The left sidebar lists various configuration options: Virtual Server, Applications, Filters (selected), Firewall, DMZ, Performance, and WAN (EVDO). The main content area is titled 'Filters' and explains that filters are used to allow or deny LAN users from accessing the Internet. It offers two options: IP Filters and MAC Filters (selected). Under 'MAC Filters', it states that MAC addresses can be used to allow or deny network access. Three radio buttons are present: 'Disabled MAC Filters' (selected), 'Only allow computers with MAC address listed below to access the network', and 'Only deny computers with MAC address listed below to access the network'. Below these are input fields for 'Name', 'MAC Address' (in a segmented format), and a 'DHCP Client' dropdown menu showing 'cjones, 00:06:5B:DE:CD:9A'. A 'Clone' button is next to the DHCP Client field. At the bottom, there is a 'MAC Filter List' table with columns for 'Name' and 'MAC Address'. The footer contains 'Apply', 'Cancel', and 'Help' buttons, and a copyright notice for Kyocera Wireless Corp.

Use MAC (Media Access Control) Filters to allow or deny LAN (Local Area Network) computers by their MAC addresses from accessing the Network. You can either manually add a MAC address or select the MAC address from the list of clients that are currently connected to the Broadband Router.

Filters- Select the filter you wish to use; in this case, MAC filters was chosen.


MAC Filters- Choose Disable MAC filters; allow MAC addresses listed below; or deny MAC addresses listed below. By **default** the MAC Filters is **Disabled MAC Filters**.

Name- Enter the name here.

MAC Address- Enter the MAC Address.

DHCP Client- Select a DHCP client from the pull-down list; click **Clone** to copy that MAC Address.

Advanced > Firewall

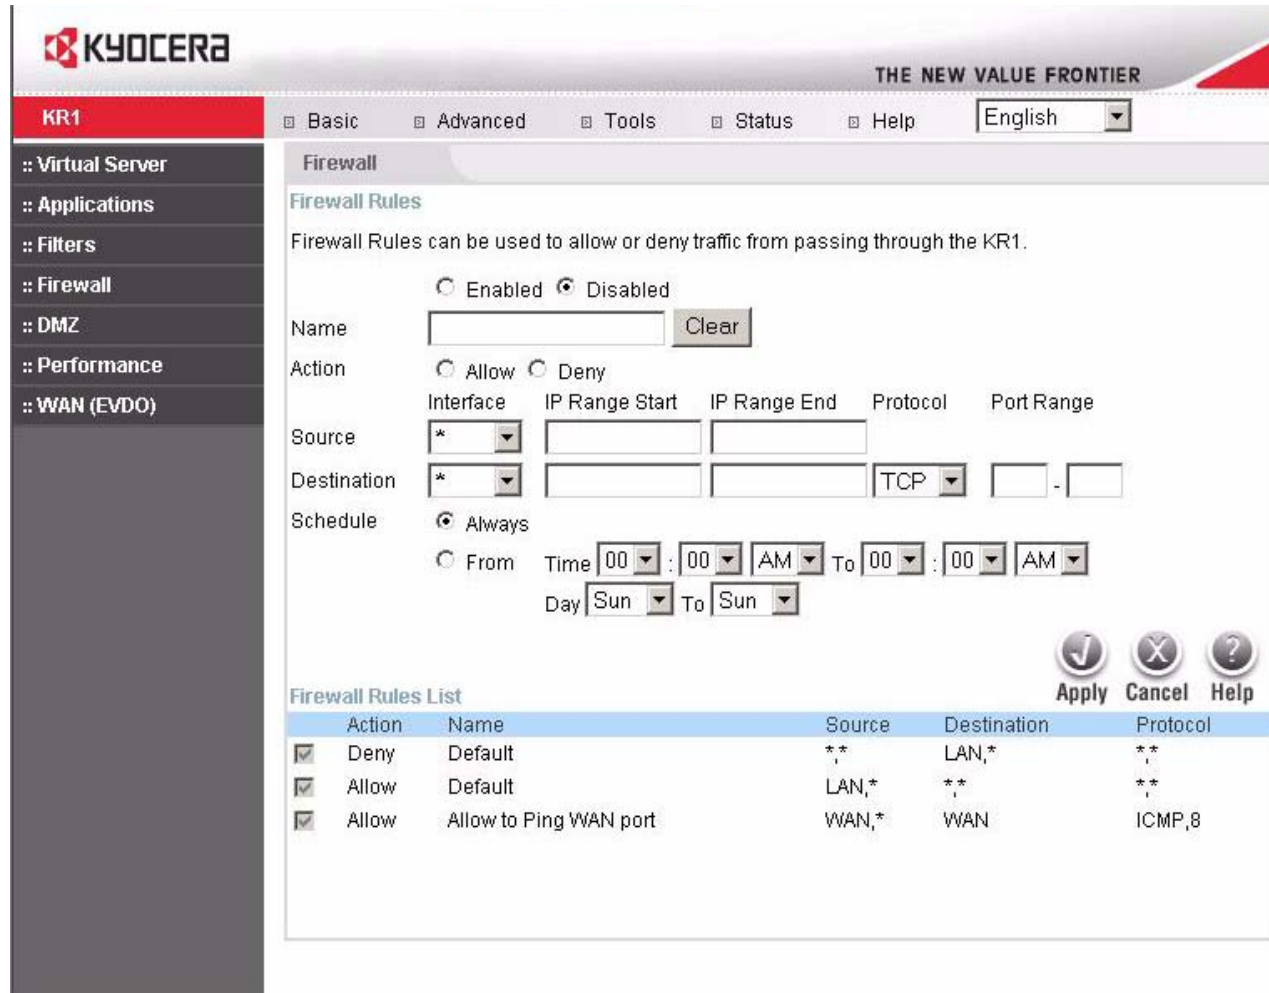

Firewall Rules

Firewall Rules can be used to allow or deny traffic from passing through the KR1.

☐ Enabled ☒ Disabled

Name:

Action: ☐ Allow ☐ Deny

Interface: IP Range Start: IP Range End: Protocol: Port Range:

Source: Destination: TCP

Schedule: ☒ Always ☐ From Time: : AM To: : AM Day: To:

Action	Name	Source	Destination	Protocol
<input checked="" type="checkbox"/> Deny	Default	**	LAN,*	**
<input checked="" type="checkbox"/> Allow	Default	LAN,*	**	**
<input checked="" type="checkbox"/> Allow	Allow to Ping WAN port	WAN,*	WAN	ICMP,8

Firewall Rules is an advanced feature used to deny or allow traffic from passing through the Kyocera KR1 Mobile Router. It works in the same way as IP Filters with additional settings. You can create more detailed access rules for the Kyocera KR1 Mobile Router. When virtual services are created and enabled, it also displays in Firewall Rules. Firewall Rules contain all network firewall rules pertaining to IP (Internet Protocol).

In the Firewall Rules List at the bottom of the screen, the priorities of the rules are from top (highest priority) to bottom (lowest priority.)

Note: The Kyocera KR1 Mobile Router MAC Address filtering rules have precedence over the Firewall Rules.

Firewall Rules- Enable or disable the Firewall. By default the Firewall Rules is **Disabled**.

Name- Enter the name


Action- Allow or Deny

Source- Enter the IP Address range

Destination- Enter the IP Address range; the Protocol; and the Port Range. By default the Protocol is TCP.

Schedule- Select Always or enter the Time Range. By default the Schedule is Always.

Advanced > DMZ

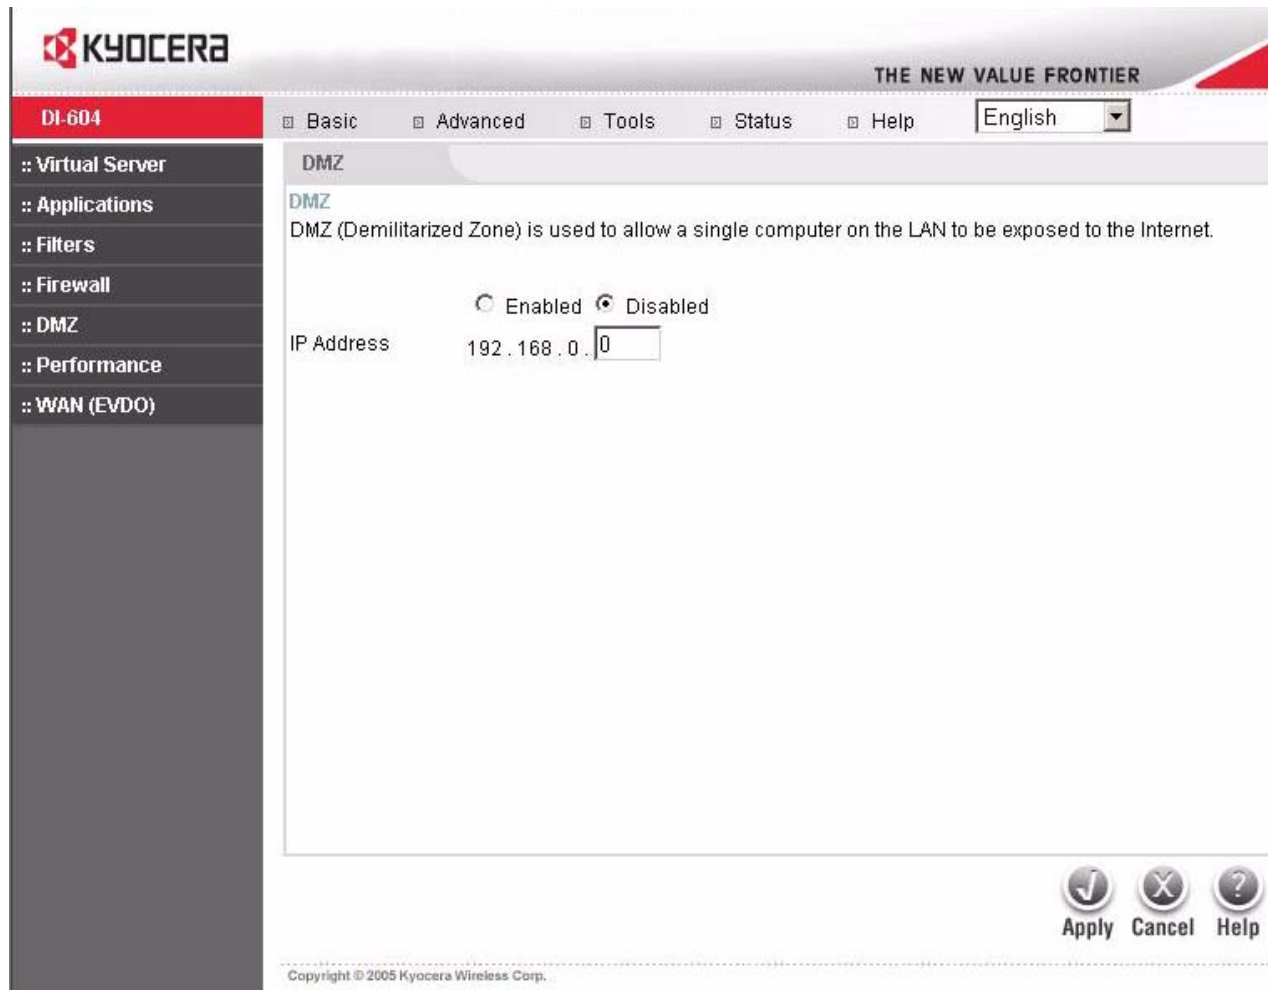

KYOCERA THE NEW VALUE FRONTIER

DI-604 Basic Advanced Tools Status Help English

DMZ

DMZ (Demilitarized Zone) is used to allow a single computer on the LAN to be exposed to the Internet.

☐ Enabled
 ☒ Disabled

IP Address 192.168.0.0

Apply Cancel Help


Copyright © 2005 Kyocera Wireless Corp.

If you have a client PC that cannot run Internet applications properly from behind the Kyocera KR1 Mobile Router, then you can set the client up for unrestricted Internet access. It allows a computer to be exposed to the Internet. This feature is useful for gaming purposes. Enter the IP address of the internal computer that will be the DMZ host. Adding a client to the DMZ (Demilitarized Zone) may expose your local network to a variety of security risks, so only use this option as a last resort.

DMZ- **Enable** or **Disable** the DMZ. The DMZ (Demilitarized Zone) allows a single computer to be exposed to the Internet. By **default** the DMZ is **Disabled**.

IP Address - Enter the **IP Address** of the computer to be in the **DMZ**.

Advanced > Performance

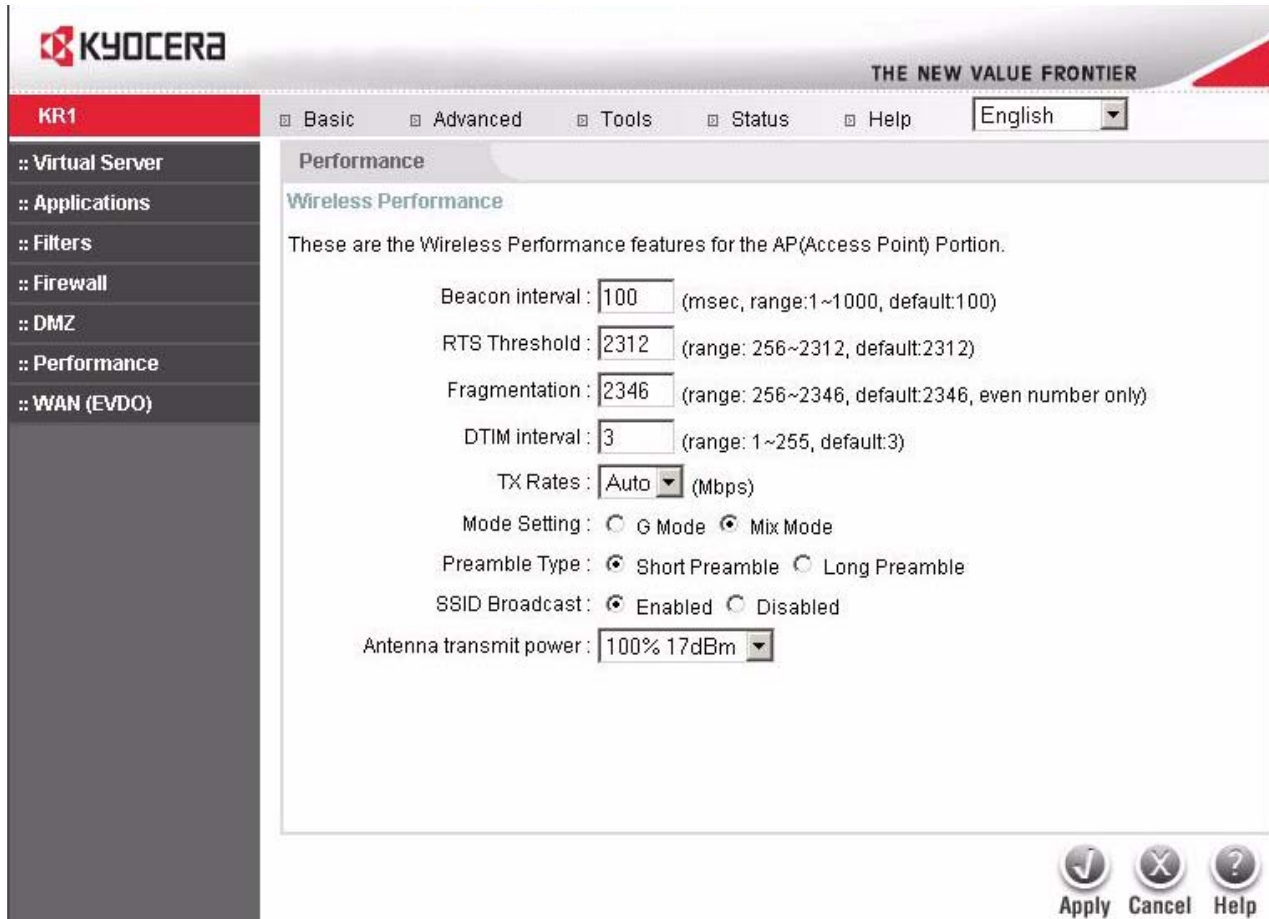

KYOCERA THE NEW VALUE FRONTIER

KR1 Basic Advanced Tools Status Help English

Performance

Wireless Performance

These are the Wireless Performance features for the AP(Access Point) Portion.

Beacon interval : 100 (msec, range: 1~1000, default: 100)

RTS Threshold : 2312 (range: 256~2312, default: 2312)

Fragmentation : 2346 (range: 256~2346, default: 2346, even number only)

DTIM interval : 3 (range: 1~255, default: 3)

TX Rates : Auto (Mbps)

Mode Setting : ☐ G Mode ☒ Mix Mode

Preamble Type : ☒ Short Preamble ☐ Long Preamble

SSID Broadcast : ☒ Enabled ☐ Disabled

Antenna transmit power : 100% 17dBm

Apply Cancel Help

Wireless Performance- Displayed in this window are the Wireless Performance features for the Access Point portion of the Kyocera KR1 Mobile Router.

Beacon Interval- Beacons are packets sent by an Access Point to synchronize a wireless network. Specify a value. By **default** the Beacon Interval is **100**. This is the recommended setting.

RTS Threshold- This value should remain at its **default** setting of 2312. If inconsistent data flow is a problem, only a minor modification should be made.

Fragmentation- The fragmentation threshold, which is specified in bytes, determines whether packets get fragmented. Packets exceeding the 2346 byte setting are fragmented before transmission. By **default** the Fragmentation is **2346**.


DTIM interval- (Delivery Traffic Indication Message). A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages. By **default** the DTIM interval is **3**.

TX Rates-Auto- is the **default** selection. Select from the drop down menu.

Mode Setting- Select G Mode is your wireless network consists of only 802.11g clients. If your wireless network includes 802.11b clients, select Mix Mode.

-
- Preamble Type-** Select Short or Long Preamble. The Preamble defines the length of the CRC block (Cyclic Redundancy Check is a common technique for detecting data transmission errors) for communication between the Kyocera KR1 Mobile Router and the roaming wireless network adapters. Note: High network traffic areas should use the shorter preamble type. By **default** the Preamble Type is **Short Preamble**.
- SSID Broadcast-** Choose Enabled to broadcast the SSID across the network. All devices on a network must share the same SSID (Service Set Identifier) to establish communication. Choose Disabled if you do not wish to broadcast the SSID over the network. By **default** the SSID Broadcast is **Disabled**.
- Antenna transmit power-** Antenna transmit power is the level at which your Wireless Access Point (WAP) transmits the wireless signal. You may select from the following four options: **100% 17dBm**, **50% 15dBm**, **25% 12 dBm**, and **12.5% 10dBm**. **100% 17dBm** is the **default**. Select this option if you desire a larger wireless coverage area. Select **12.5% 10dBm** for a smaller wireless coverage area.

Advanced > WAN (EVDO)

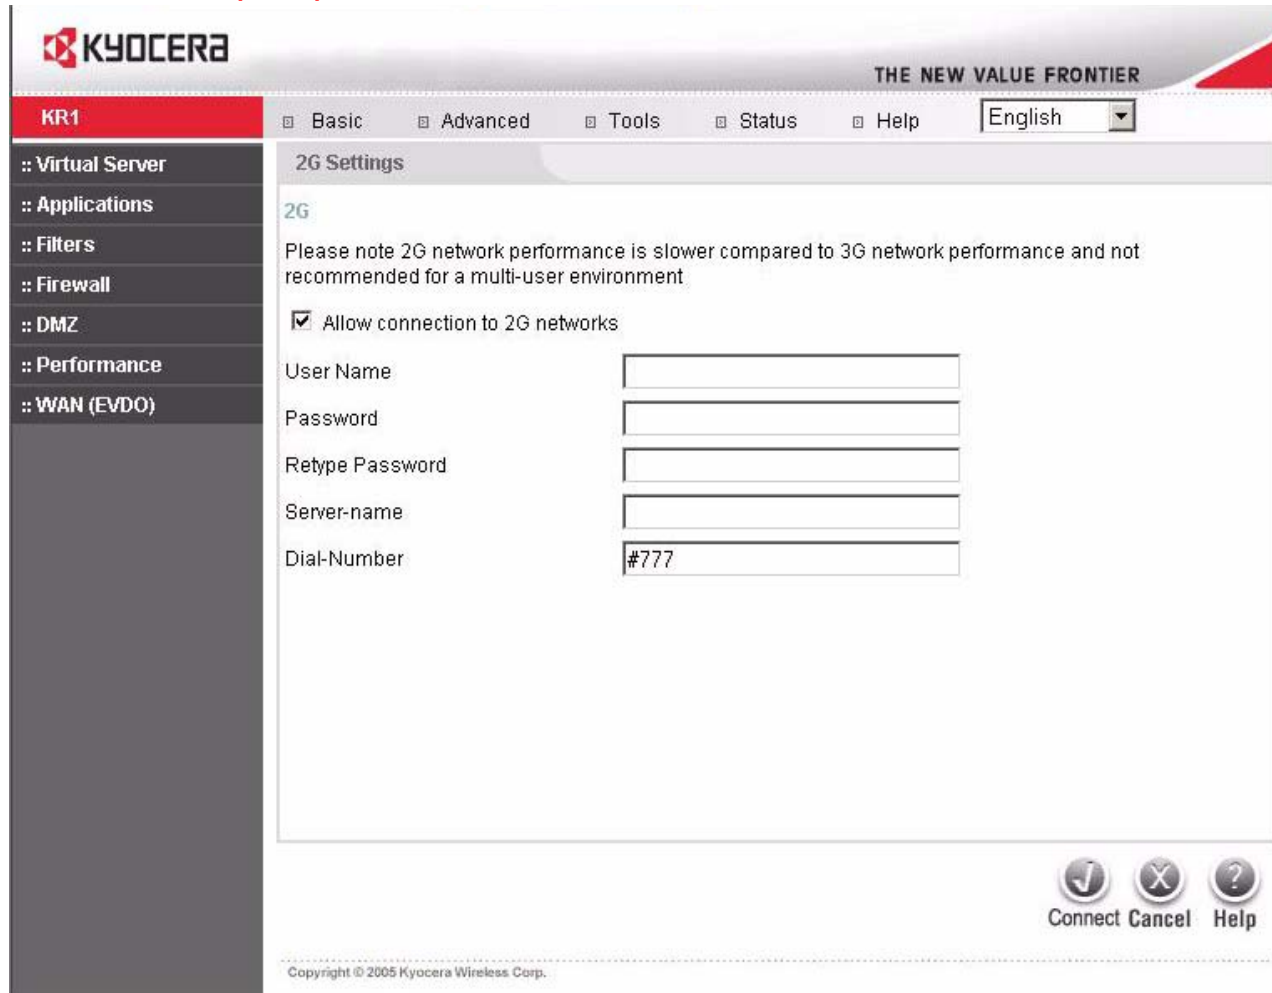

KYOCERA THE NEW VALUE FRONTIER

KR1 Basic Advanced Tools Status Help English

2G Settings

2G

Please note 2G network performance is slower compared to 3G network performance and not recommended for a multi-user environment.

☒ Allow connection to 2G networks

User Name

Password

Retype Password

Server-name

Dial-Number

Connect Cancel Help


Copyright © 2005 Kyocera Wireless Corp.

Caution for WAN (EVDO) Networking: The WAN (EVDO) fields may not be necessary for your connection. The information on this page will only be used when your service provider requires you to enter a **User Name** and **Password** to connect to the EVDO network.

Please refer to your EVDO documentation or service provider for additional information.

- User Name-** Enter the new **User Name** for your PC card here.
- Password-** Enter the new **Password** for your PC card here.
- Retype Password-** Enter your **Password** again for confirmation.
- Server-name-** Enter the name of your network server (optional).
- Dial-Number-** The default is #777. This field should not be altered except when required by your service provider.

Tools > Admin

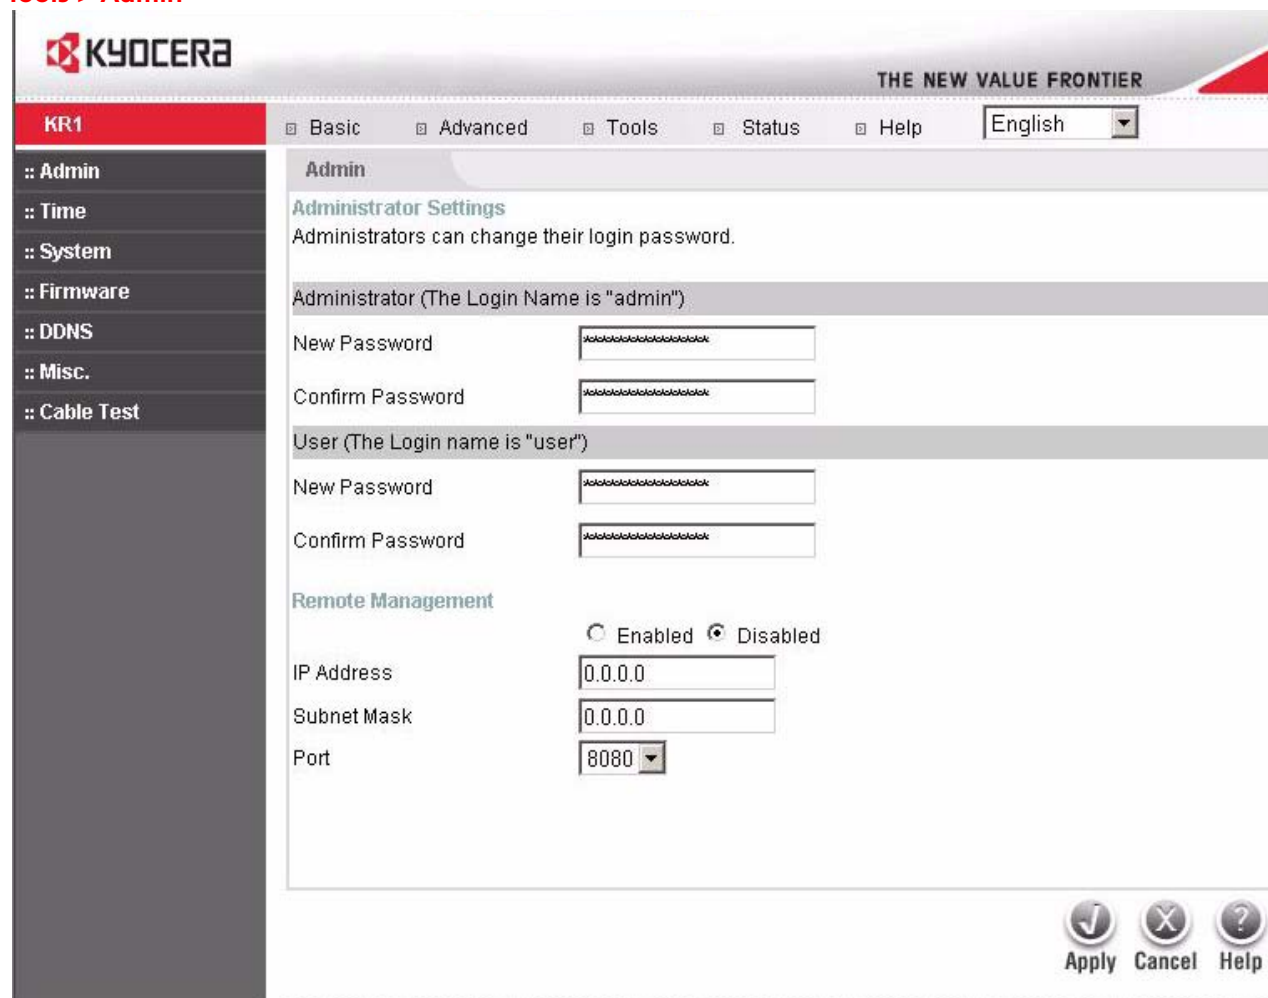

The screenshot shows the Kyocera KR1 web interface. The top navigation bar includes 'Basic', 'Advanced', 'Tools', 'Status', and 'Help'. The 'Tools' menu is expanded, showing 'Admin' as the selected option. The 'Admin' section is titled 'Administrator Settings' and includes instructions for changing login passwords. It features two sections: 'Administrator (The Login Name is "admin")' and 'User (The Login name is "user")'. Each section has input fields for 'New Password' and 'Confirm Password'. Below these is the 'Remote Management' section, which includes radio buttons for 'Enabled' and 'Disabled' (currently selected), and input fields for 'IP Address', 'Subnet Mask', and 'Port' (set to 8080). At the bottom right, there are 'Apply', 'Cancel', and 'Help' buttons.

The **Tools > Admin** menu allows an administrator to change the system password.

Two account options are available: **admin** and **user**.

The **Admin** account option allows read/write access.

The **User** account option allows for read-only access only. Within this option, the user can view settings, but cannot make any changes.

Administrator- **admin** is the **Administrator** login name

Password- Enter the password. and then re-enter the password for confirmation.


User- **user** is the **User** login name

Password- Enter the password, and then re-enter the password for confirmation.

Remote Management- Remote management allows the Kyocera KR1 Mobile Router to be configured from the Internet by a web browser. A username and password is still required to access the Web-Management interface. In general, only a member of your network can browse the built-in web pages to perform **Administrator** tasks. This feature enables you to perform Administrator tasks from the remote (Internet) host.

IP Address-	The Internet IP address of the computer that has access to the Broadband Router. If you input an asterisk (*) into this field, then any computer is able to access the Router. Putting an asterisk (*) into this field would present a security risk and is not recommended.
Subnet Mask-	All the devices in the network must share the same subnet mask.
Port-	The port number used to access the Broadband Router.
Example-	http://x.x.x.x:8080 where x.x.x.x is the WAN IP address of the Broadband Router and 8080 is the port used for the Web-Management interface.

Tools > Time

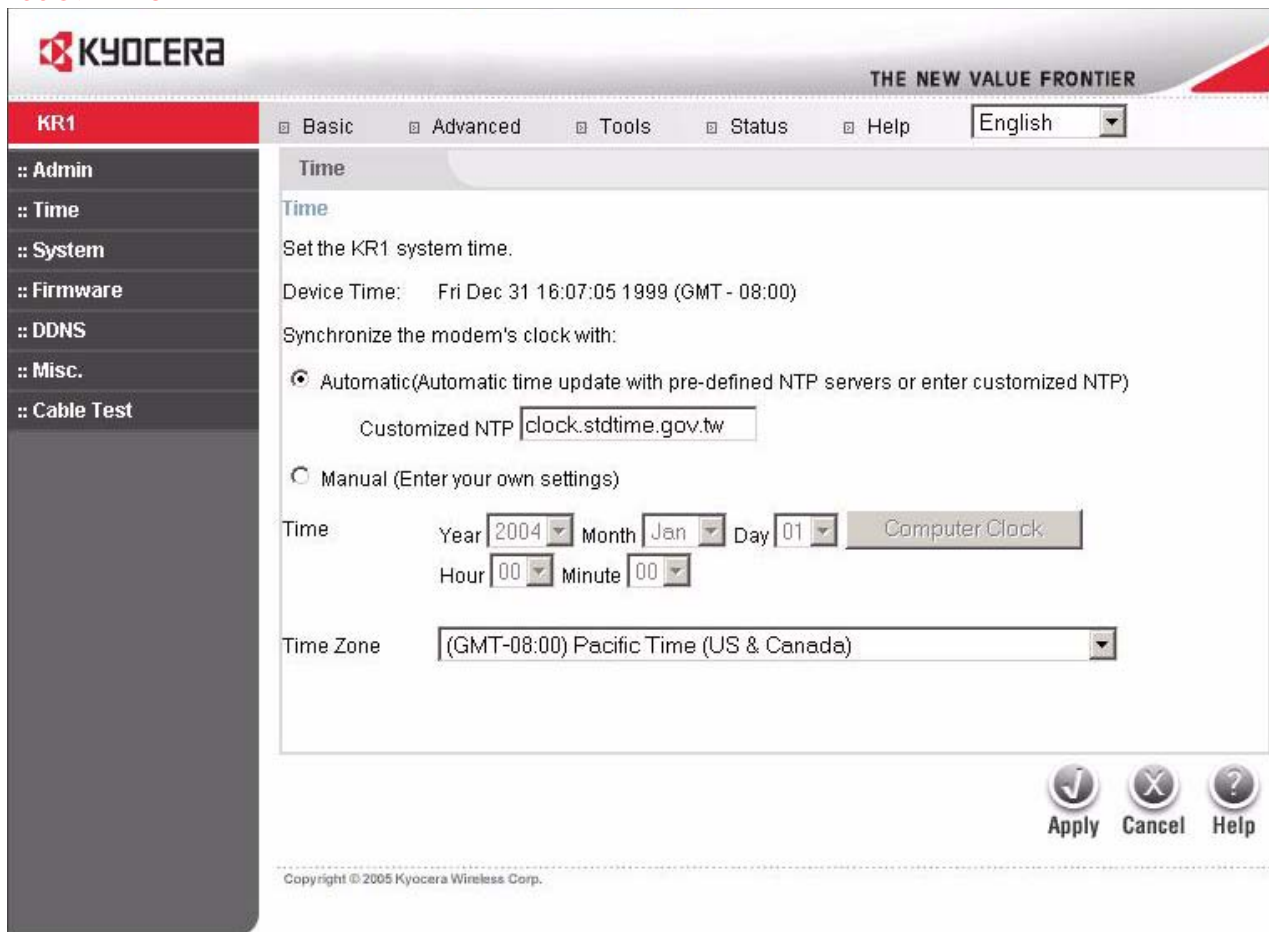


Synchronize the modem's clock with- NTP is short for Network Time Protocol. NTP synchronizes computer clock times in a network of computers. You have the option to manually set the time or have it automatically done for you. By **default** the Synchronize the modem's clock with is **Automatic**.

Time- To manually input the time, enter the values in these fields for the Year, Month, Day, Hour, and Minute. Click **Set Time**.

Time Zone- Select the Time Zone from the pull-down menu.

Tools > System

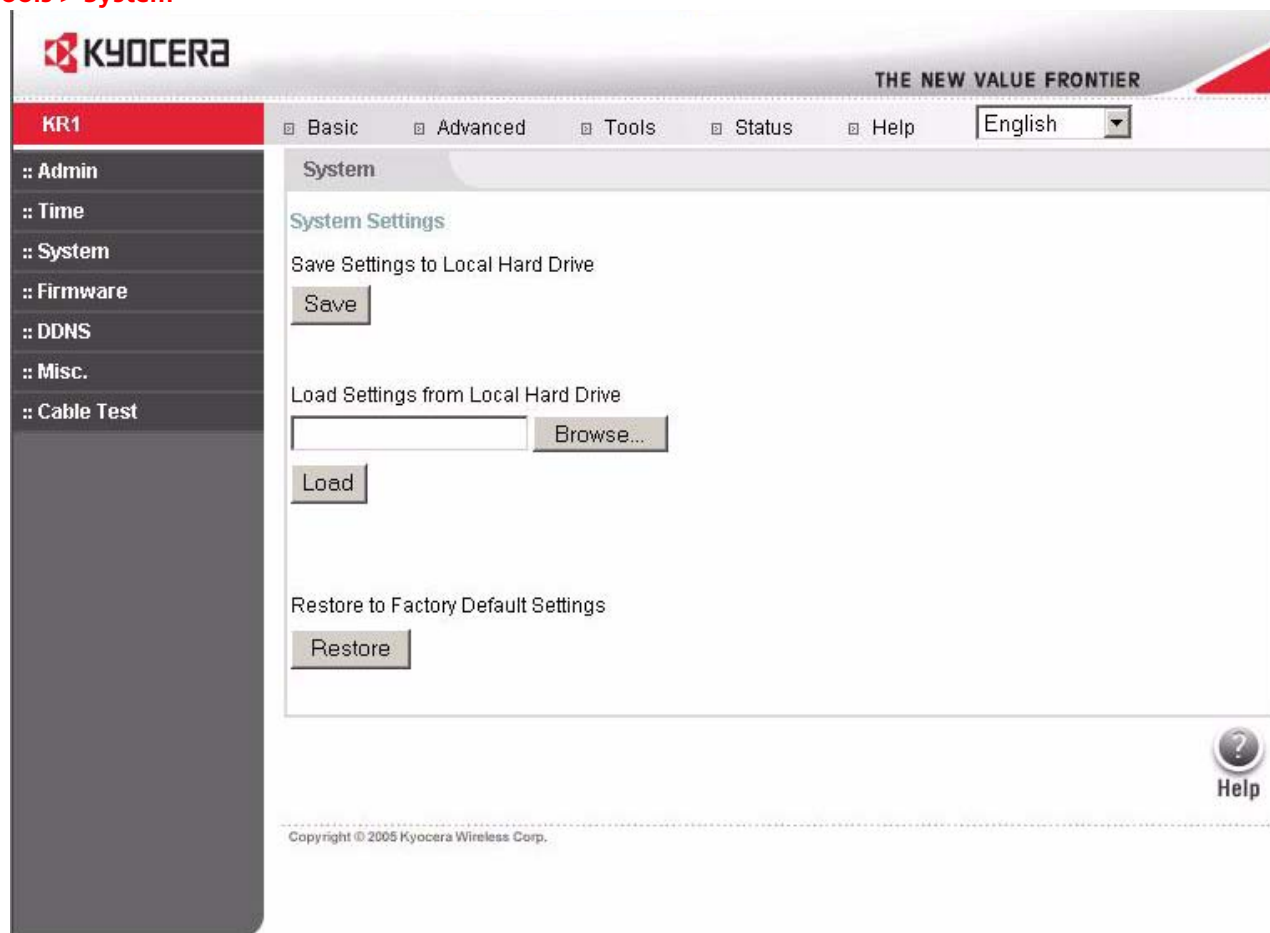


The current system settings can be saved as a file onto the local hard drive. The saved file, or any other saved settings file, can be loaded back on the Broadband Router. To reload a system settings file, click on **Browse** to browse the local hard drive and locate the system file to be used. You may also reset the Broadband Router back to factory settings by clicking **Restore**.

Save Settings to Local Hard Drive- Click **Save** to save the current settings to the local Hard Drive

Load Settings from Local Hard Drive- Click **Browse** to find the settings, then click **Load**

Restore to Factory Default Settings- Click **Restore** to restore the factory **default** settings

Tools > Firmware

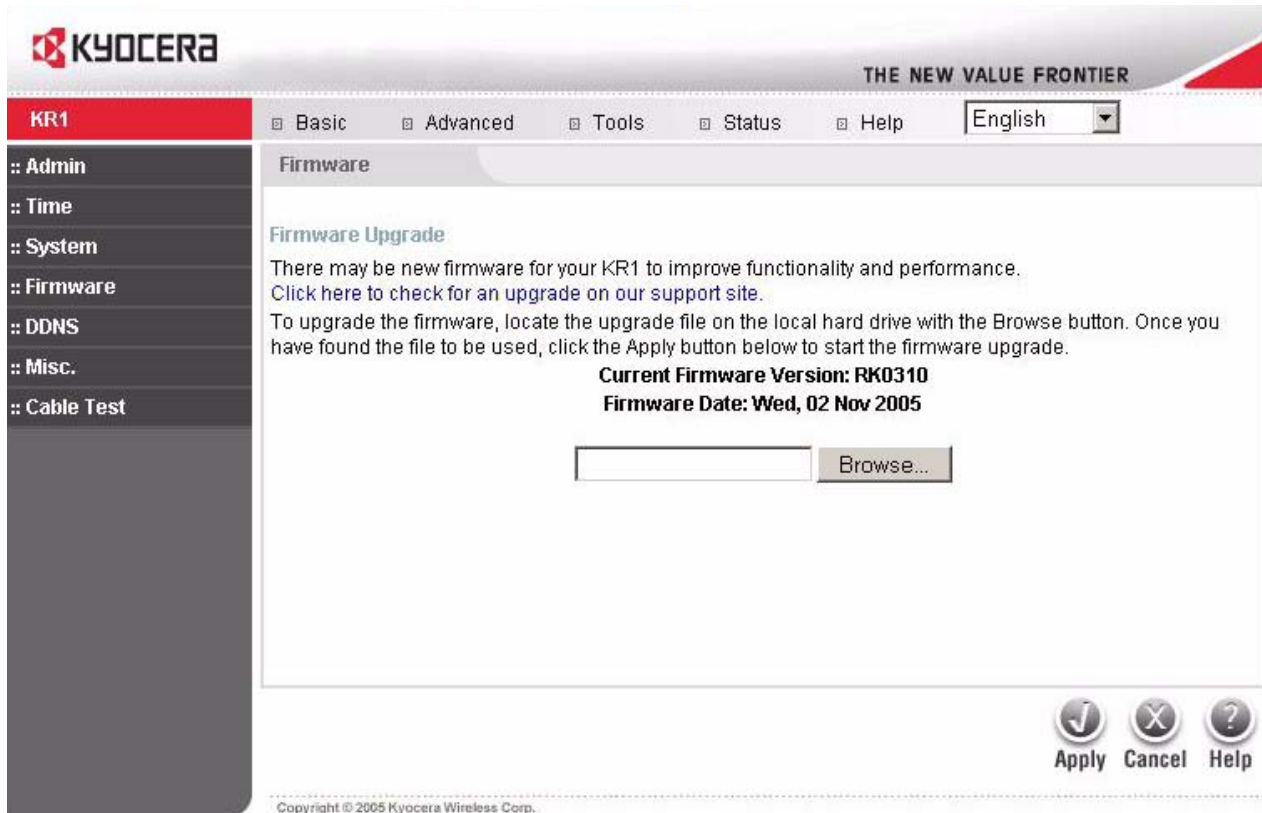

You can upgrade the firmware of the Kyocera KR1 Mobile Router from this menu. Ensure the firmware you want to use is on the local hard drive of your computer. Click on **Browse** to browse and locate the firmware to be used for your update.

Please check the Kyocera support site at <http://www.kyocera-wireless.com> for firmware updates and related information.


Caution: Due to packet loss, please do not use a WiFi connection for firmware upgrades.

Firmware Upgrade- Click on the link in this screen to find out if there is an updated firmware version. If so, download the new firmware to your hard drive.

Browse- After you have downloaded the new firmware, click **Browse** in this window to locate the firmware update on your hard drive. Click **Apply** to complete the firmware upgrade.

Note: The firmware upgrade process will take three to five minutes.

Tools > DDNS

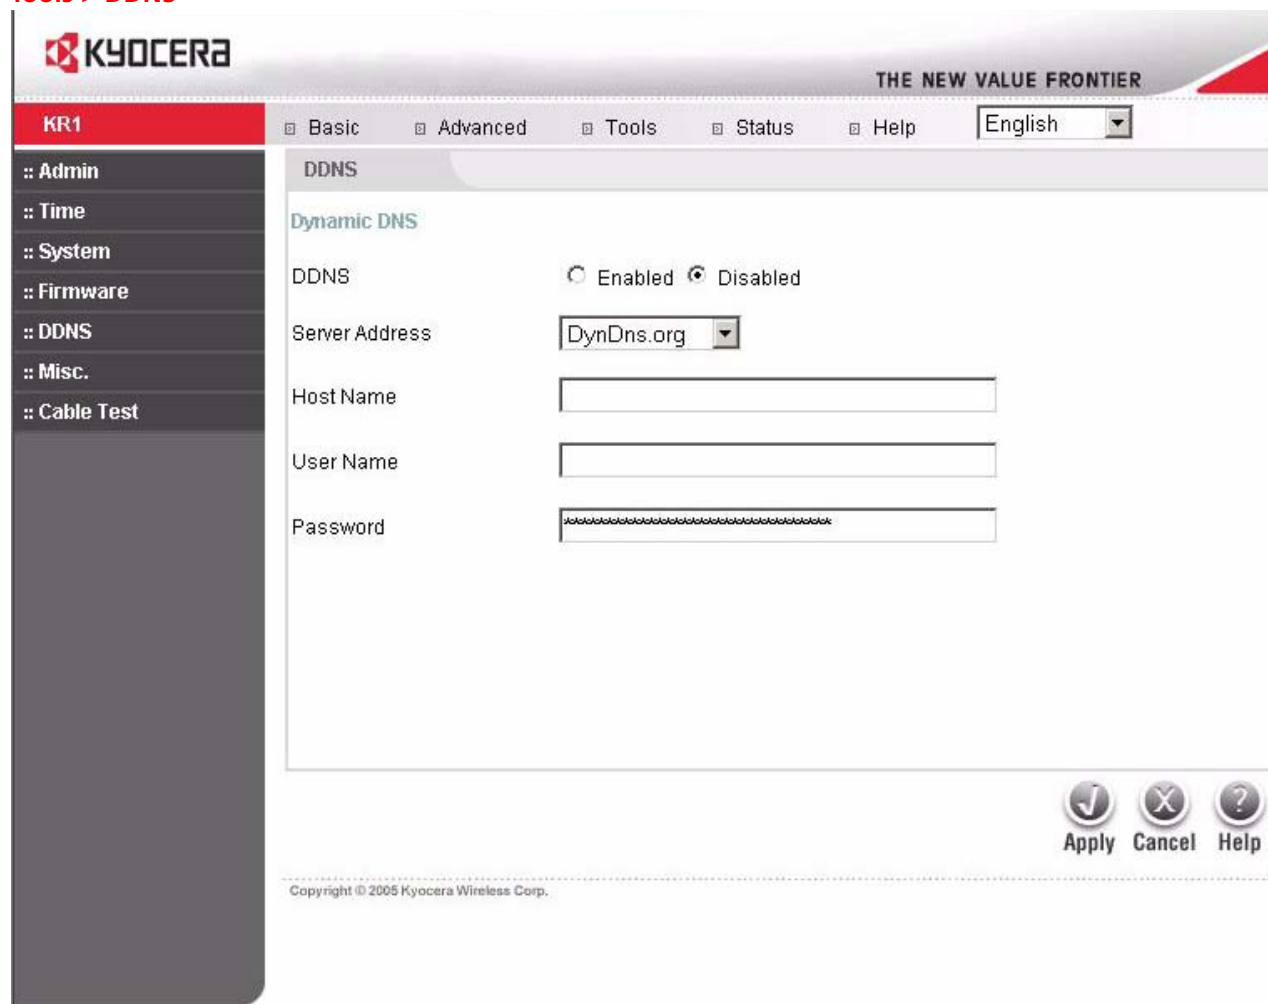

KYOCERA THE NEW VALUE FRONTIER

KR1 Basic Advanced Tools Status Help English

DDNS

Dynamic DNS

DDNS ☐ Enabled ☒ Disabled

Server Address

Host Name

User Name


Password

Apply Cancel Help

Copyright © 2005 Kyocera Wireless Corp.

- DDNS-** To use the Dynamic Domain Name Server update the client built into the router, click Enabled. By **default** the DDNS is **Disabled**.
- Server Address-** Choose your DDNS provider from the drop down menu.
- Host Name-** Enter the Host Name that you registered with your DDNS service provider.
- User Name-** Enter the User Name for your DDNS account.
- Password-** Enter the Password for your DDNS account.

Tools > Misc

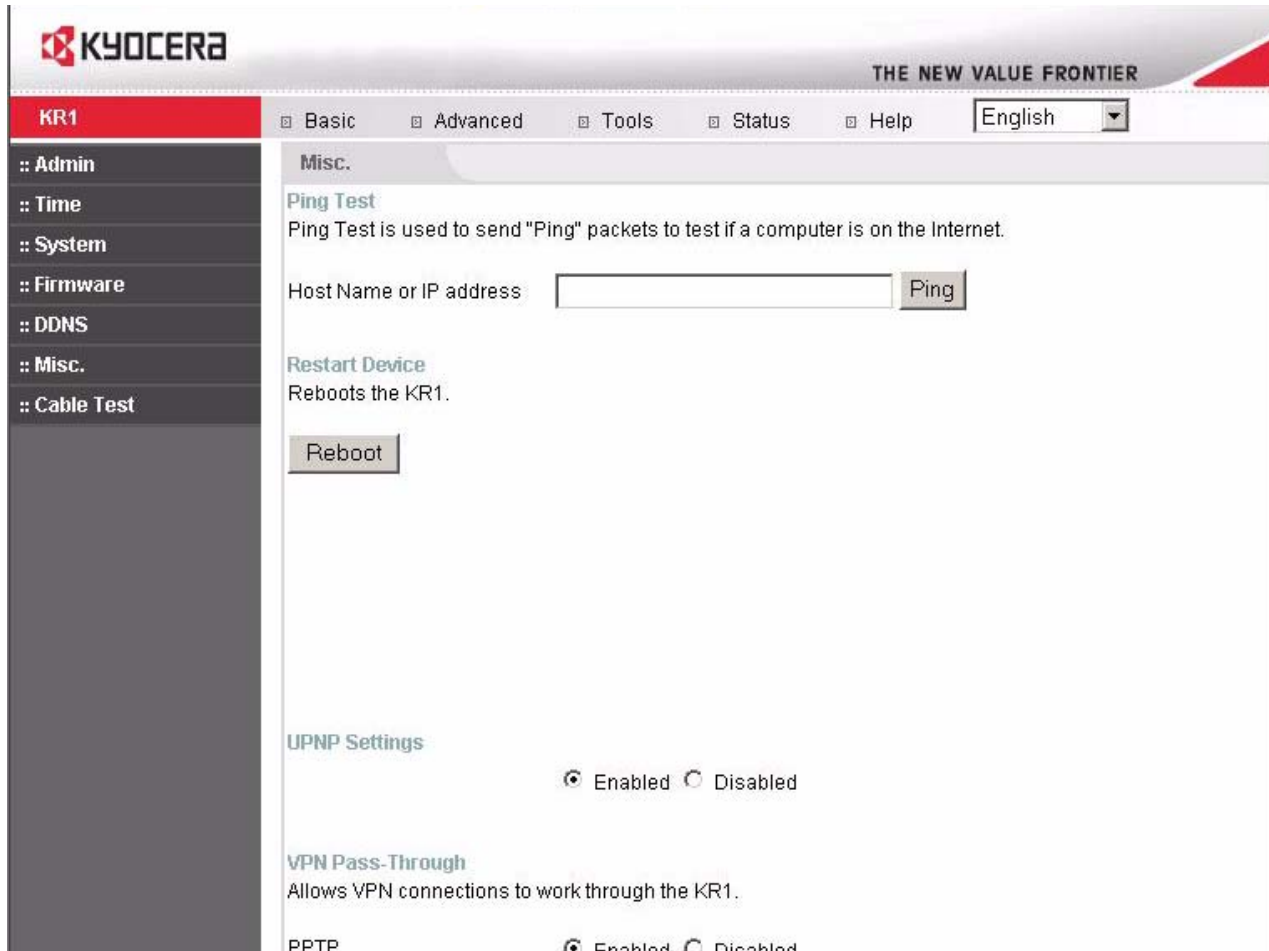

The screenshot shows the Kyocera KR1 Mobile Router configuration interface. The top navigation bar includes 'Basic', 'Advanced', 'Tools', 'Status', and 'Help'. The 'Tools' tab is selected, and the 'Misc.' sub-tab is active. The left sidebar lists various configuration categories: Admin, Time, System, Firmware, DDNS, Misc., and Cable Test. The main content area is titled 'Misc.' and contains three sections: 'Ping Test', 'Restart Device', and 'UPNP Settings'. The 'Ping Test' section has a text input field for 'Host Name or IP address' and a 'Ping' button. The 'Restart Device' section has a 'Reboot' button. The 'UPNP Settings' section has radio buttons for 'Enabled' (selected) and 'Disabled'. Below this, there is a 'VPN Pass-Through' section with a description and radio buttons for 'Enabled' (selected) and 'Disabled'.

Ping Test- The Ping Test is used to send Ping packets to test if a computer is on the Internet. Enter the IP Address that you wish to Ping, and click **Ping**.

Restart Device- Click **Reboot** to restart the Kyocera KR1 Mobile Router. This will take a few minutes.

Block WAN Ping- Discard Ping from WAN If you choose to block WAN Ping, the WAN IP address of the Kyocera KR1 Mobile Router does not respond to pings. Blocking the Ping may provide some extra security from hackers. Discard Ping from WAN side. Click **Enabled** to block the WAN ping. By default the Block WAN Ping is **Enabled**.

UPNP- To use the Universal Plug and Play feature click on **Enabled**. UPNP provides compatibility with networking equipment, software and peripherals of the over 400 vendors that cooperate in the Plug and Play forum. By default the UPNP Ping is **Enabled**.


VPN Pass Through- The Kyocera KR1 Mobile Router supports VPN (Virtual Private Network) pass-through for both PPTP (Point-to-Point Tunneling Protocol) and IPSec (IP Security). Once VPN pass-through is enabled, there is no need to open up virtual services. Multiple VPN connections can be made through the Kyocera KR1 Mobile Router. This is useful when you have many VPN clients on the LAN network.

PPTP- select **Enabled** or **Disabled**. By default the PPTP is **Enabled**.

IPSec- select **Enabled** or **Disabled**. By default the IPSec is **Enabled**.

Multicast Streams- Enter this option to allow Multicast traffic to pass through the Kyocera KR1 Mobile Router from the Internet.

Tools > Cable Test

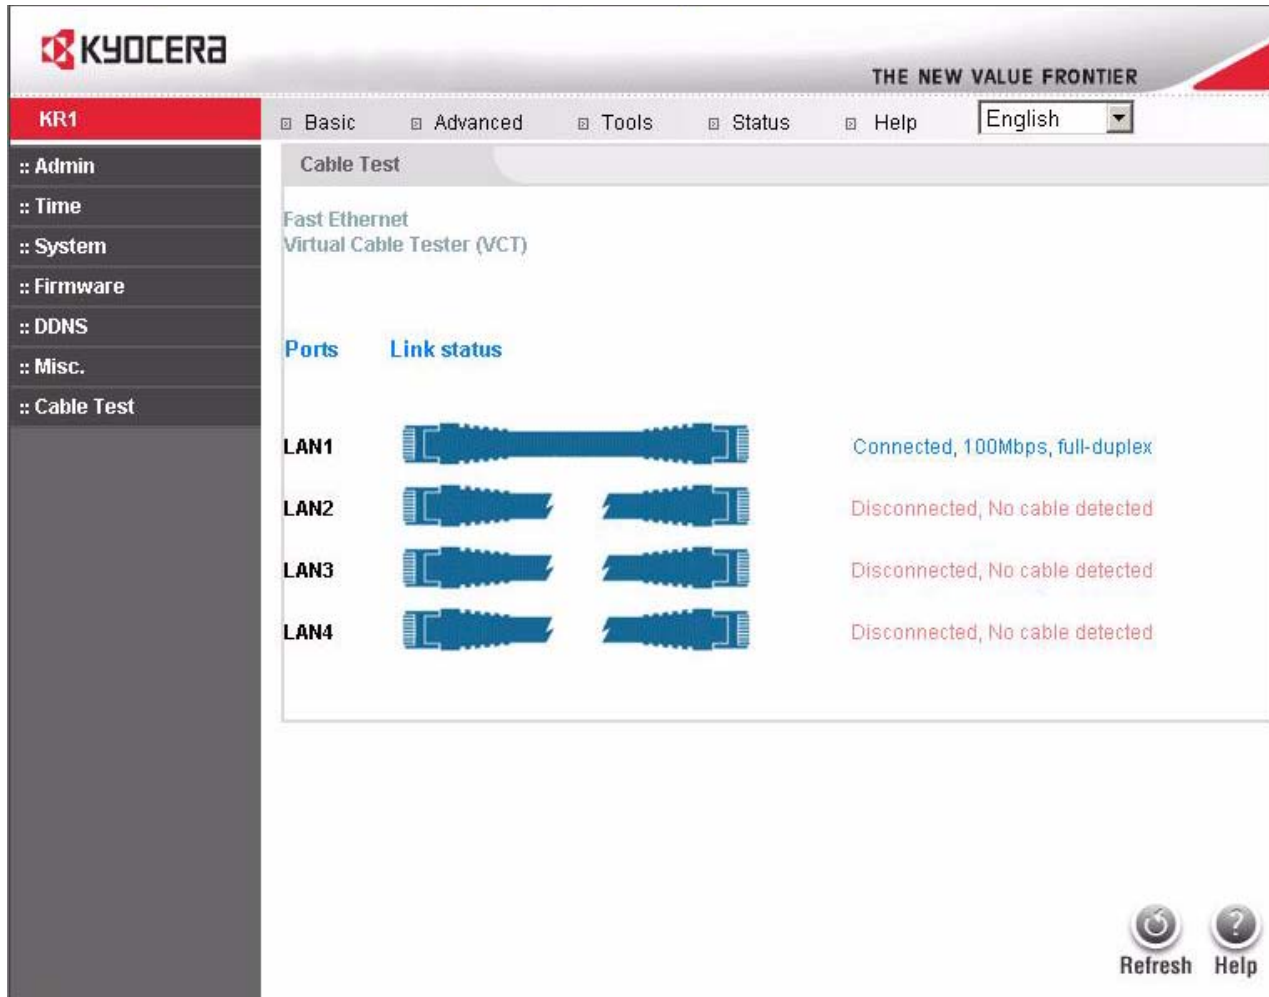

KYOCERA THE NEW VALUE FRONTIER

Basic Advanced Tools Status Help English

KR1

- Admin
- Time
- System
- Firmware
- DDNS
- Misc.
- Cable Test**

Cable Test


Fast Ethernet
Virtual Cable Tester (VCT)

Ports	Link status
LAN1	Connected, 100Mbps, full-duplex
LAN2	Disconnected, No cable detected
LAN3	Disconnected, No cable detected
LAN4	Disconnected, No cable detected

Refresh Help

This page displays the current information for the Kyocera KR1 Mobile Router, which will assist you in troubleshooting your network. It will display which port on the Kyocera KR1 Mobile Router is currently connected.

Status > Device Info

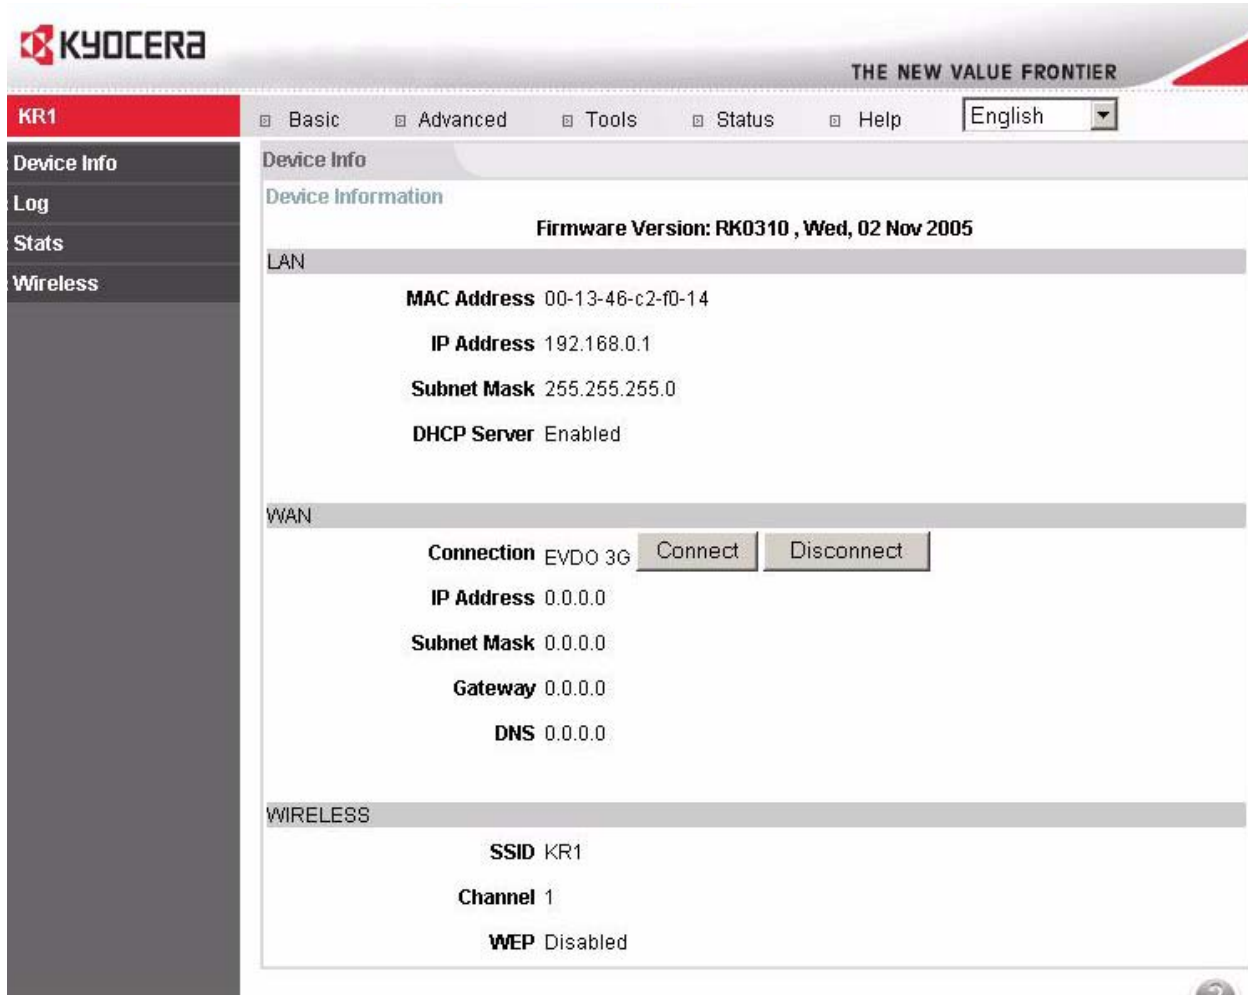

The screenshot shows the Kyocera KR1 Mobile Router configuration interface. The top navigation bar includes 'Basic', 'Advanced', 'Tools', 'Status', and 'Help'. The 'Status' tab is selected, and the 'Device Info' sub-tab is active. The left sidebar shows 'Device Info', 'Log', 'Stats', and 'Wireless'. The main content area displays the following information:


- Device Information:** Firmware Version: RK0310 , Wed, 02 Nov 2005
- LAN:**
 - MAC Address: 00-13-46-c2-f0-14
 - IP Address: 192.168.0.1
 - Subnet Mask: 255.255.255.0
 - DHCP Server: Enabled
- WWAN:**
 - Connection: EVDO 3G (with 'Connect' and 'Disconnect' buttons)
 - IP Address: 0.0.0.0
 - Subnet Mask: 0.0.0.0
 - Gateway: 0.0.0.0
 - DNS: 0.0.0.0
- WIRELESS:**
 - SSID: KR1
 - Channel: 1
 - WEP: Disabled

This page displays the current LAN, WWAN, and WIRELESS information for the Kyocera KR1 Mobile Router. A connection to the EVDO network will be established when the unit is powered on. Use the **Disconnect** button to disconnect from the EVDO network; use the **Connect** button to establish a connection.

- LAN**
 - Address:** Displays the MAC address
 - IP Address:** LAN/Private IP Address of the KR1.
 - Subnet Mask:** LAN/Private Subnet Mask of the KR1.
 - DHCP Server:** Shows whether or not the DHCP server is Enabled or Disabled
- WWAN**
 - Connection:** Displays which device is connected to the Kyocera KR1 Mobile Router
 - IP Address:** WAN/Public IP Address
 - Subnet Mask:** Subnet Mask: WAN/Public Subnet Mask
 - Gateway:** WAN/Public Gateway IP Address
 - Domain Name Server:** WAN/Public DNS IP Address
- WIRELESS**
 - SSID:** Displays the current SSID. By **default** the SSID is **KR1**.
 - SSI Channel:** Displays the current channel. By **default** the Channel is **2**.
 - WEP:** Indicates whether WEP is enabled or disabled. By **default** the WEP is **Disabled**.

Status > Log

The Kyocera KR1 Mobile Router keeps a running log of events and activities. Select the **Log Settings** button. The following screen appears.

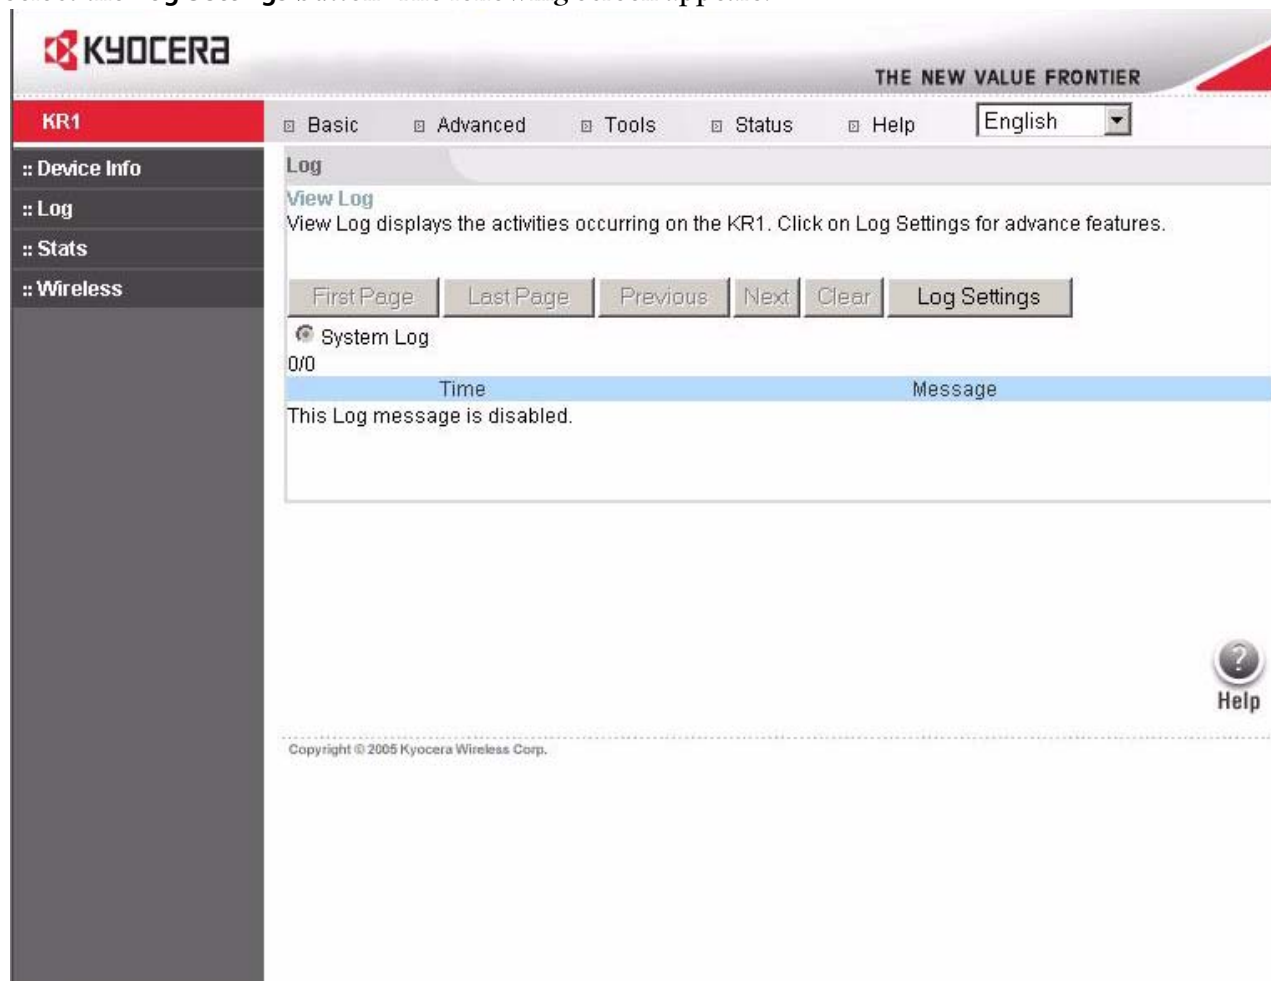


View Log-

First Page-	The first page of the log
Last Page-	The last page of the log
Previous-	Moves back one log page
Next-	Moves forward one log page
Clear-	Clears the logs completely
Log Settings-	Brings up the page to configure the log

Status > Log > Log Settings #2


Check the box next to **System Log**. Click **Apply**.

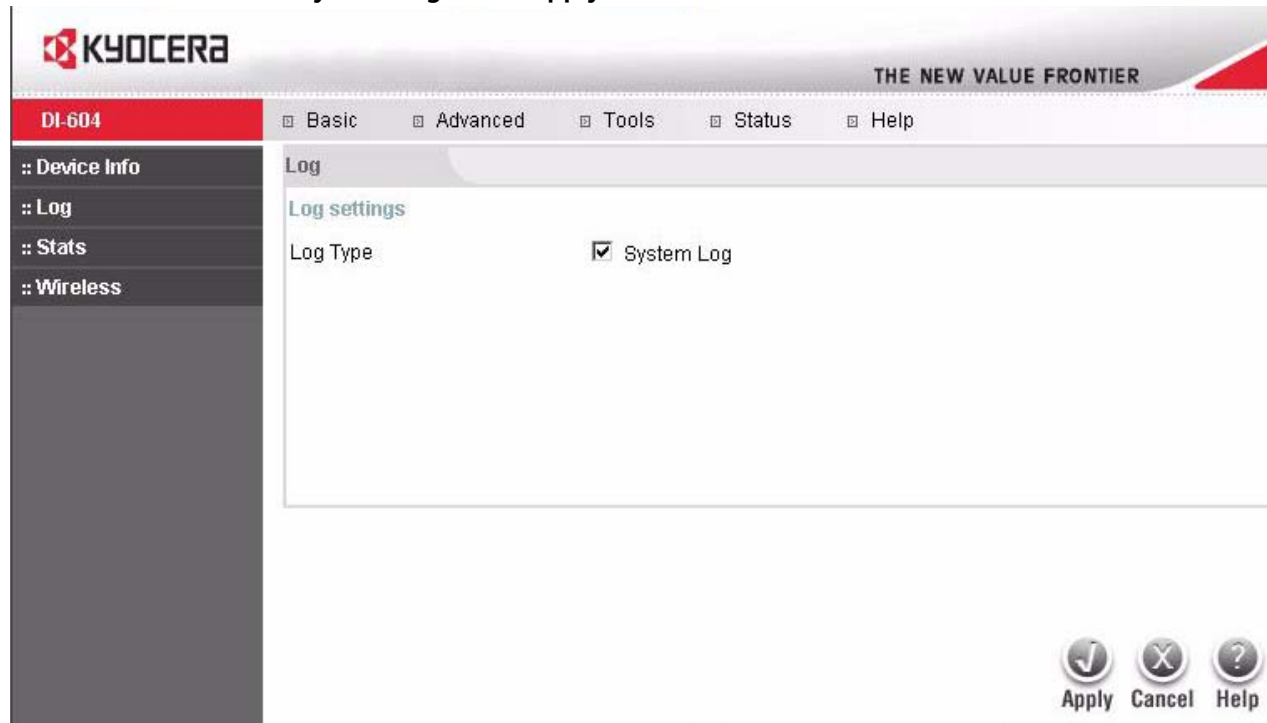

The screenshot shows the KYOCERA DI-604 configuration interface. The top header features the KYOCERA logo and the slogan "THE NEW VALUE FRONTIER". Below the header is a navigation bar with tabs for Basic, Advanced, Tools, Status, and Help. On the left side, there is a sidebar menu with options: Device Info, Log, Stats, and Wireless. The main content area is titled "Log" and contains a section for "Log settings". Under "Log settings", there is a "Log Type" label and a checkbox labeled "System Log", which is currently checked. At the bottom right of the interface, there are three buttons: "Apply", "Cancel", and "Help".

Status > Log > Log Settings #3

A screen will display the Kyocera KR1 Mobile Router log settings.

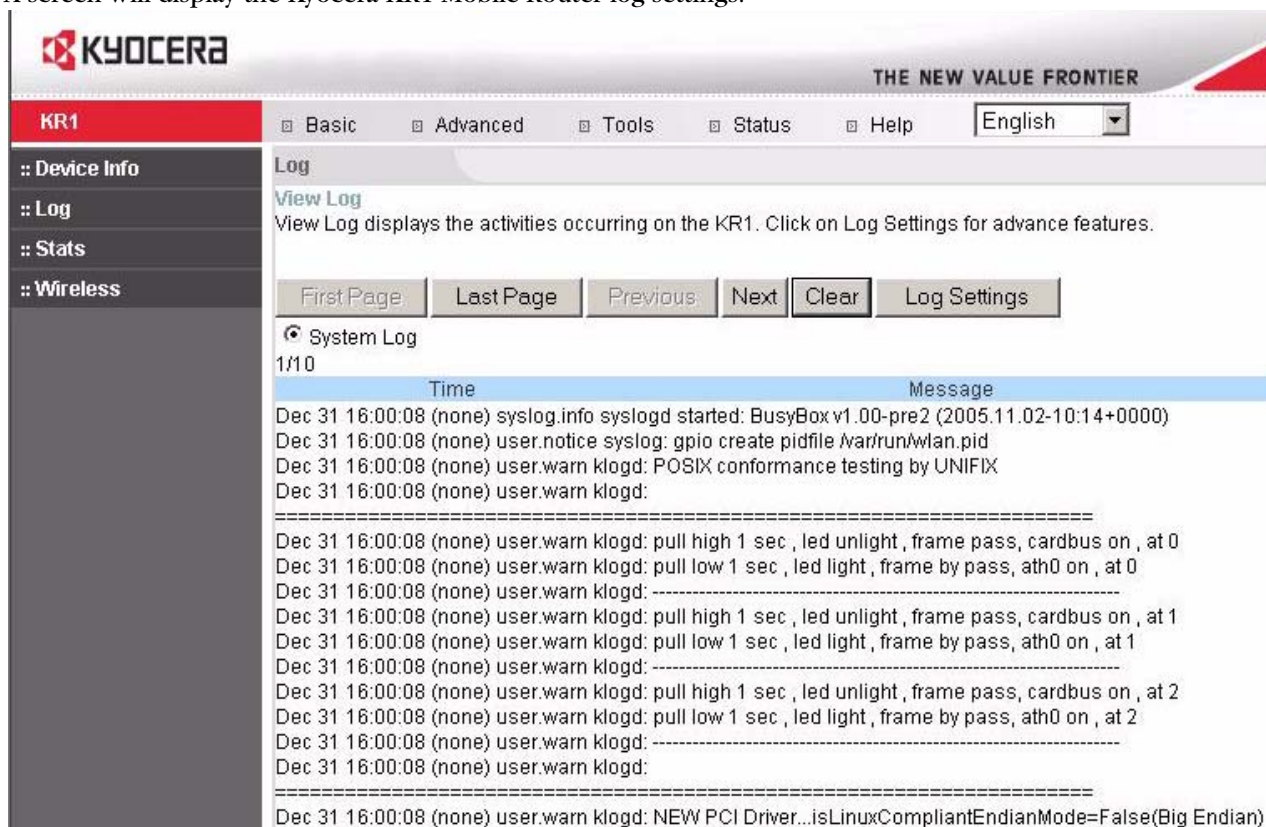


The screenshot shows the Kyocera KR1 Mobile Router web interface. The top navigation bar includes links for Basic, Advanced, Tools, Status, and Help, along with a language dropdown set to English. The left sidebar contains a menu with options: Device Info, Log (selected), Stats, and Wireless. The main content area is titled 'Log' and includes a 'View Log' link. Below this, a message states: 'View Log displays the activities occurring on the KR1. Click on Log Settings for advance features.' A set of navigation buttons is provided: First Page, Last Page, Previous, Next, Clear, and Log Settings. The 'System Log' section shows a list of log entries with columns for Time and Message. The entries include system startup messages, user warnings, and klogd status reports.

Time	Message
Dec 31 16:00:08 (none)	syslog.info syslogd started: BusyBox v1.00-pre2 (2005.11.02-10:14+0000)
Dec 31 16:00:08 (none)	user.notice syslog: gpio create pidfile /var/run/wlan.pid
Dec 31 16:00:08 (none)	user.warn klogd: POSIX conformance testing by UNIFIX
Dec 31 16:00:08 (none)	user.warn klogd:
Dec 31 16:00:08 (none)	user.warn klogd: pull high 1 sec , led unlight , frame pass, cardbus on , at 0
Dec 31 16:00:08 (none)	user.warn klogd: pull low 1 sec , led light , frame by pass, ath0 on , at 0
Dec 31 16:00:08 (none)	user.warn klogd: -----
Dec 31 16:00:08 (none)	user.warn klogd: pull high 1 sec , led unlight , frame pass, cardbus on , at 1
Dec 31 16:00:08 (none)	user.warn klogd: pull low 1 sec , led light , frame by pass, ath0 on , at 1
Dec 31 16:00:08 (none)	user.warn klogd: -----
Dec 31 16:00:08 (none)	user.warn klogd: pull high 1 sec , led unlight , frame pass, cardbus on , at 2
Dec 31 16:00:08 (none)	user.warn klogd: pull low 1 sec , led light , frame by pass, ath0 on , at 2
Dec 31 16:00:08 (none)	user.warn klogd: -----
Dec 31 16:00:08 (none)	user.warn klogd:
Dec 31 16:00:08 (none)	user.warn klogd: NEW PCI Driver...isLinuxCompliantEndianMode=False(Big Endian)

Note: If the device is rebooted, the logs are automatically cleared.

Status > Stats

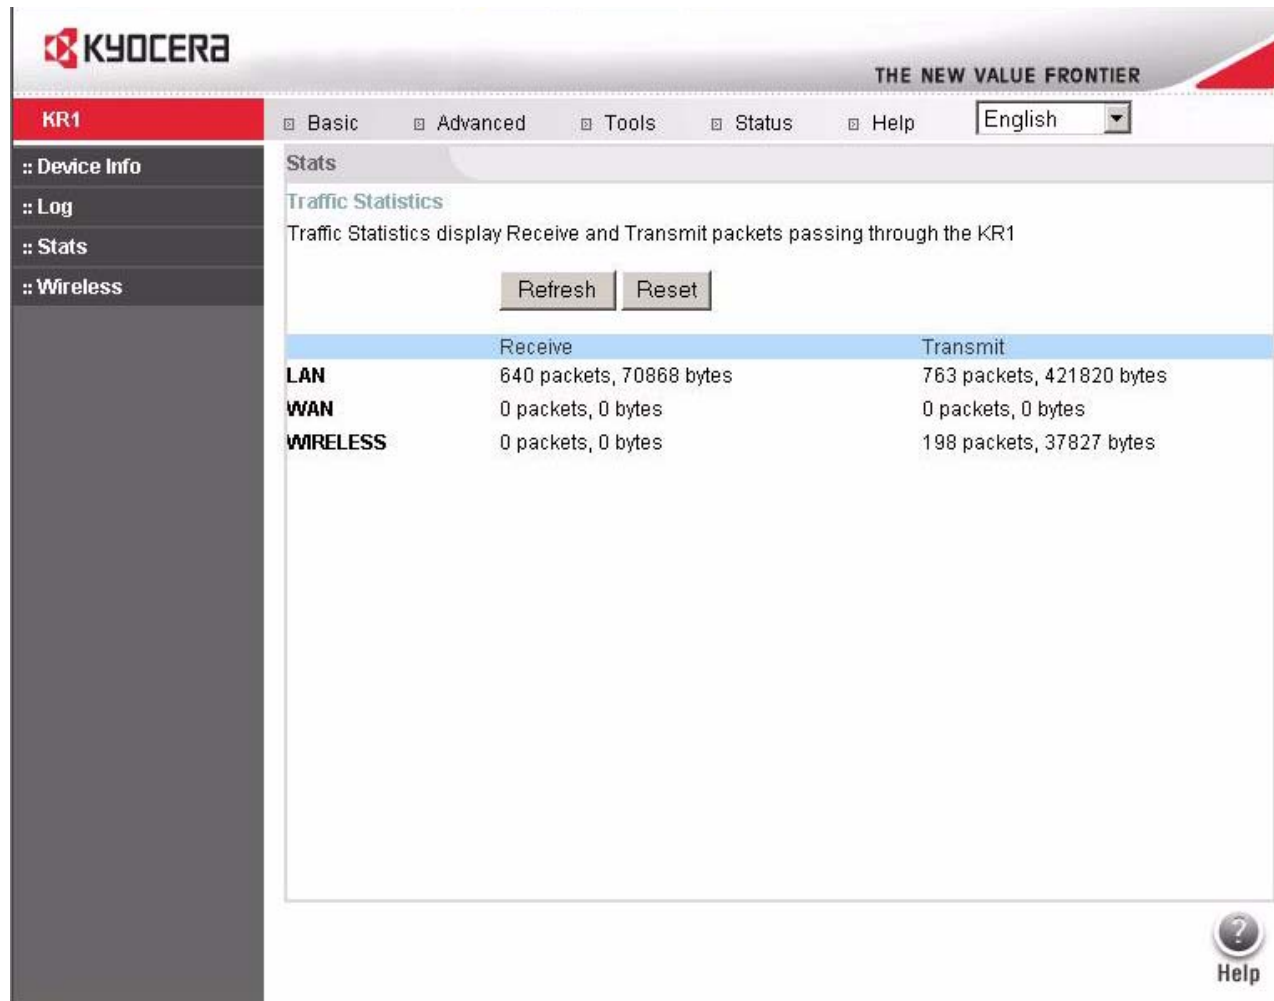

The screenshot shows the Kyocera KR1 Mobile Router configuration interface. The top navigation bar includes tabs for Basic, Advanced, Tools, Status, and Help, along with a language dropdown set to English. The left sidebar contains links for Device Info, Log, Stats, and Wireless. The main content area is titled 'Stats' and displays 'Traffic Statistics'. A description states: 'Traffic Statistics display Receive and Transmit packets passing through the KR1'. Below this are 'Refresh' and 'Reset' buttons. A table shows traffic data for LAN, WAN, and WIRELESS interfaces, categorized by Receive and Transmit packets and bytes.


	Receive	Transmit
LAN	640 packets, 70868 bytes	763 packets, 421820 bytes
WAN	0 packets, 0 bytes	0 packets, 0 bytes
WIRELESS	0 packets, 0 bytes	198 packets, 37827 bytes

The screen above displays the Traffic Statistics. Here you can view the amount of packets that pass through the Kyocera KR1 Mobile Router on both the WAN and the LAN Ports. The traffic counter resets if the device is rebooted.

The wireless client table displays a current list of connected wireless clients. This table also displays the connection time and MAC address of the connected wireless client.

Help > Help Menu

Click on **Help** at any time, for more information.

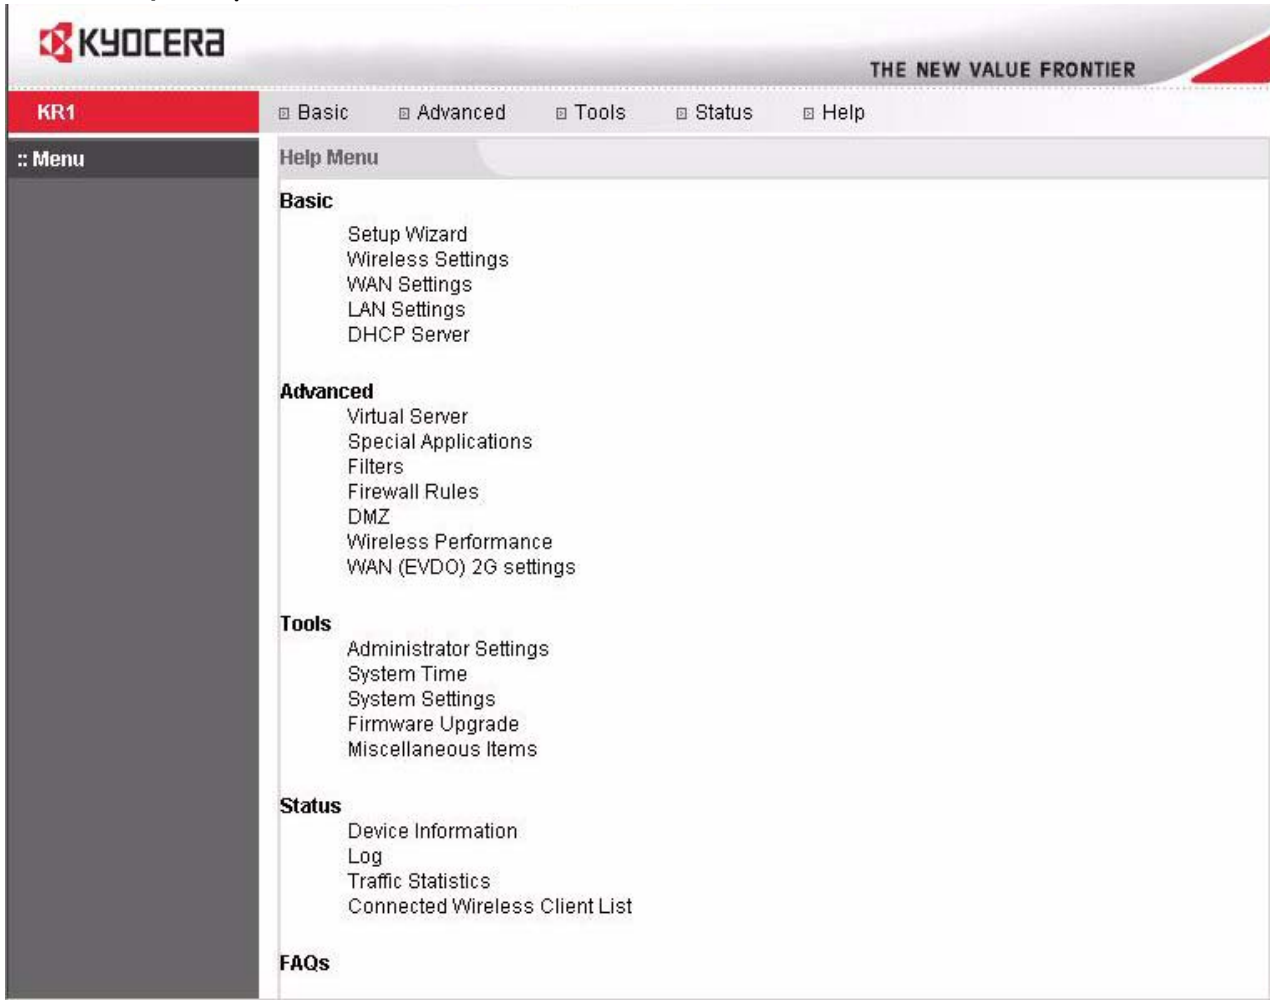

The screenshot displays the Kyocera KR1 Mobile Router web interface. At the top, the Kyocera logo and the slogan "THE NEW VALUE FRONTIER" are visible. Below the header, a navigation bar includes links for Basic, Advanced, Tools, Status, and Help. The left sidebar shows a "Menu" option. The main content area, titled "Help Menu", is organized into several sections: Basic (Setup Wizard, Wireless Settings, WAN Settings, LAN Settings, DHCP Server), Advanced (Virtual Server, Special Applications, Filters, Firewall Rules, DMZ, Wireless Performance, WAN (EVDO) 2G settings), Tools (Administrator Settings, System Time, System Settings, Firmware Upgrade, Miscellaneous Items), Status (Device Information, Log, Traffic Statistics, Connected Wireless Client List), and FAQs.

Section	Items
Basic	Setup Wizard Wireless Settings WAN Settings LAN Settings DHCP Server
Advanced	Virtual Server Special Applications Filters Firewall Rules DMZ Wireless Performance WAN (EVDO) 2G settings
Tools	Administrator Settings System Time System Settings Firmware Upgrade Miscellaneous Items
Status	Device Information Log Traffic Statistics Connected Wireless Client List
FAQs	

6 Troubleshooting

This section provides an overview of common issues, and possible solutions for the installation and operation of the Kyocera KR1 Mobile Router.

1. I am unable to access the Configuration Menu when I use my computer to configure the router. Why?

Note: It is recommended that you use an Ethernet connection to configure the Kyocera KR1 Mobile Router.


Ensure that the **Ethernet LED** on the Kyocera KR1 Mobile Router is **ON**.

If the **LED** is not **ON**, check to see if the cable for the Ethernet connection is securely inserted.

Note: Ensure that the **IP Address** is in the same range and subnet as the Kyocera KR1 Mobile Router. The IP Address of the Kyocera KR1 Mobile Router is 192.168.0.1. All the computers on the network must have a unique IP Address within the same range (e.g., 192.168.0.x). Any computers that have identical IP Addresses will not be visible on the network. All computers must also have the same subnet mask (e.g., 255.255.255.0).

Do a **Ping test** to make sure that the Kyocera KR1 Mobile Router is responding.

Go to **Start > Run**. Type **cmd**. Press **Enter**. Type **ping 192.168.0.1**. A successful ping shows four replies.

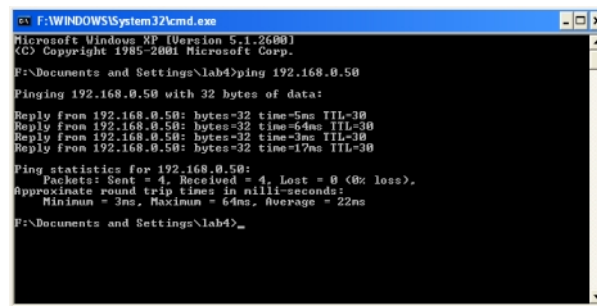

```
F:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\lab4>ping 192.168.0.50

Pinging 192.168.0.50 with 32 bytes of data:

Reply from 192.168.0.50: bytes=32 time=5ms TTL=30
Reply from 192.168.0.50: bytes=32 time=64ms TTL=30
Reply from 192.168.0.50: bytes=32 time=3ms TTL=30
Reply from 192.168.0.50: bytes=32 time=17ms TTL=30


Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 3ms, Maximum = 64ms, Average = 22ms

F:\Documents and Settings\lab4>
```


Note: If you have changed the **default** IP Address, ensure you ping the correct IP Address assigned to the Kyocera KR1 Mobile Router.

Ensure that your Ethernet Adapter is working properly, and that all network drivers are installed properly.

Note: The network adapter name displayed below is provided as an example. Network adapter names will vary depending on your specific adapter. The installation steps listed below are applicable for all network adapters.

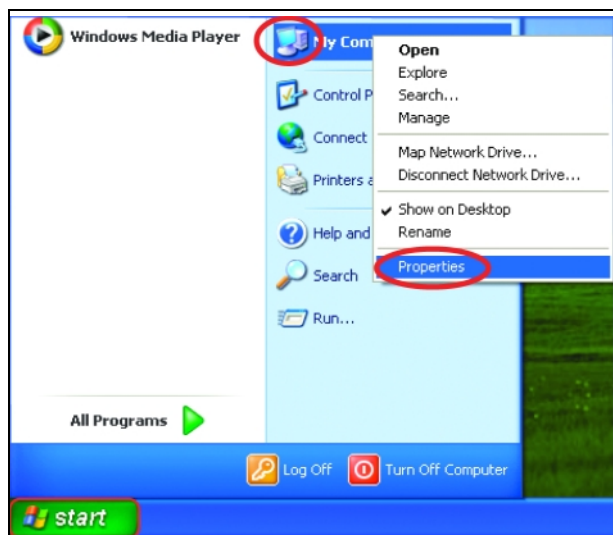

1. Go to **Start > My Computer > Properties**.

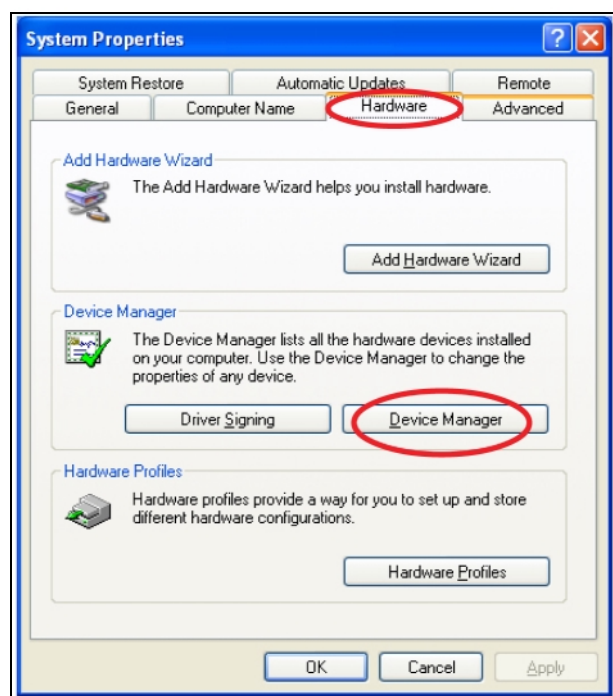

2. Select the **Hardware Tab**.

3. Click **Device Manager**.

4. Double-click on **Network Adapters**.

5. Right-click on **D-Link AirPlus DWL-G650 Wireless Cardbus Adapter**, or **your specific network adapter**.

6. Select **Properties** to ensure that all drivers are installed properly.

7. Look under **Device Status** to see if the device is working properly.

8. Click **OK**.

2. My wireless client cannot access the Internet. What should I do?

Note: Establish WiFi Connection. If you selected either **WEP** or **WPA-PSK** encryption, ensure encryption settings match your WiFi settings. WiFi and encryption settings must match to ensure Kyocera KR1 Mobile Router Configuration Menu, and Internet access. Please refer to your WiFi adapter documentation for additional information.

Ensure that the wireless client is associated and joined with the correct Access Point.

To check this connection, follow the steps below:

1. **Right-click** on the **Local Area Connection icon** in the taskbar.
2. Select **View Available Wireless Networks**. The **Connect to Wireless Network** screen appears.
Ensure you have selected the correct available network.

Ensure the IP Address assigned to the wireless adapter is within the same IP Address range as the Access Point and gateway. The Kyocera KR1 Mobile Router has an IP Address of **192.168.0.1**. Wireless adapters must have an IP Address in the same range (e.g., 192.168.0.x). Although the subnet mask must be the same for all the computers on the network, no two devices may have the same IP Address. Therefore, each device must have a unique IP Address.

To check the **IP Address** assigned to the wireless adapter, follow the steps below:

1. **Double-click** on the **Local Area Connection icon** in the taskbar.
2. Select the **Support tab**. The **IP Address** will be displayed.

3. What variables may cause my wireless products to lose reception?

The Kyocera KR1 Mobile Router will allow you to access your network from virtually anywhere in its coverage area, however, its position within your environment will affect the wireless range

Note: Please see “Installation Considerations” on page 6, for additional information.

4. Why does my wireless connection keep dropping?

- **Antenna Orientation.** Try different antenna orientations for the Kyocera KR1 Mobile Router. Try to keep the antenna at least 6 inches away from the wall or other objects.
- If you use 2.4GHz cordless phones, X-10 equipment, other home security systems, ceiling fans, or lights, your wireless connection may degrade dramatically, or drop altogether.
Try changing the channel on the Kyocera KR1 Mobile Router, and your Access Point and Wireless adapter to a different channel to avoid interference.
- Keep your product away (at least 3-6 feet) from electrical devices that generate RF noise, like microwaves, monitors, electric motors, etc.

5. I am unable to achieve a wireless connection. Why?

Note: An Ethernet connection is required to troubleshoot the Kyocera KR1 Mobile Router.

If you have enabled Encryption on the Kyocera KR1 Mobile Router, you must also enable encryption on all wireless clients in order to establish a wireless connection.

- For 802.11g, the encryption settings are: 64 or 128 bit. Ensure that the encryption bit level is the same for both the Kyocera KR1 Mobile Router, and your Wireless Client.


- Ensure that the SSID (Service Set Identifier) on the Kyocera KR1 Mobile Router and the Wireless Client are exactly the same.
If they are not, your wireless connection will not be established.
- Move the Kyocera KR1 Mobile Router and the wireless client into the same room, and then test the wireless connection.
- Disable all security settings such as **WEP**, and **MAC Address Control**.
- Turn off the Kyocera KR1 Mobile Router and the client.
Turn the Kyocera KR1 Mobile Router back on again, and then turn on the client.
- Ensure that all devices are set to **Infrastructure** mode.
- Ensure that the LED indicators are indicating normal activity. If not, ensure that the AC power and Ethernet cables are firmly connected.
- Ensure that the IP Address, subnet mask, gateway and DNS settings are correctly entered for the network.
- If you are using 2.4GHz cordless phones, X-10 equipment, or other home security systems, ceiling fans, or lights, your wireless connection may degrade dramatically, or drop altogether.
To avoid interference, change the Channel on the Kyocera KR1 Mobile Router, and all devices in your network.
- Keep your product at least 3-6 feet away from electrical devices that generate RF noise. Examples include: microwaves, monitors, electric motors, and so forth.

6. I forgot my encryption key. What should I do?

- If you forgot your encryption key, the WiFi card will be unable to establish a proper connection.
If an encryption key setting has been set for the Kyocera KR1 Mobile Router, it must also be set for the WiFi card that will connect to the Kyocera KR1 Mobile Router.
To reset the encryption key(s), login to the Kyocera KR1 Mobile Router using a wired connection.
(Please refer to “Basic > Wireless (Security-No Encryption)” on page 10, for additional information).

7. How do I reset my Kyocera KR1 Mobile Router to its factory default settings?

If other troubleshooting methods have failed, you may choose to **Reset** the Kyocera KR1 Mobile Router to its factory default settings.

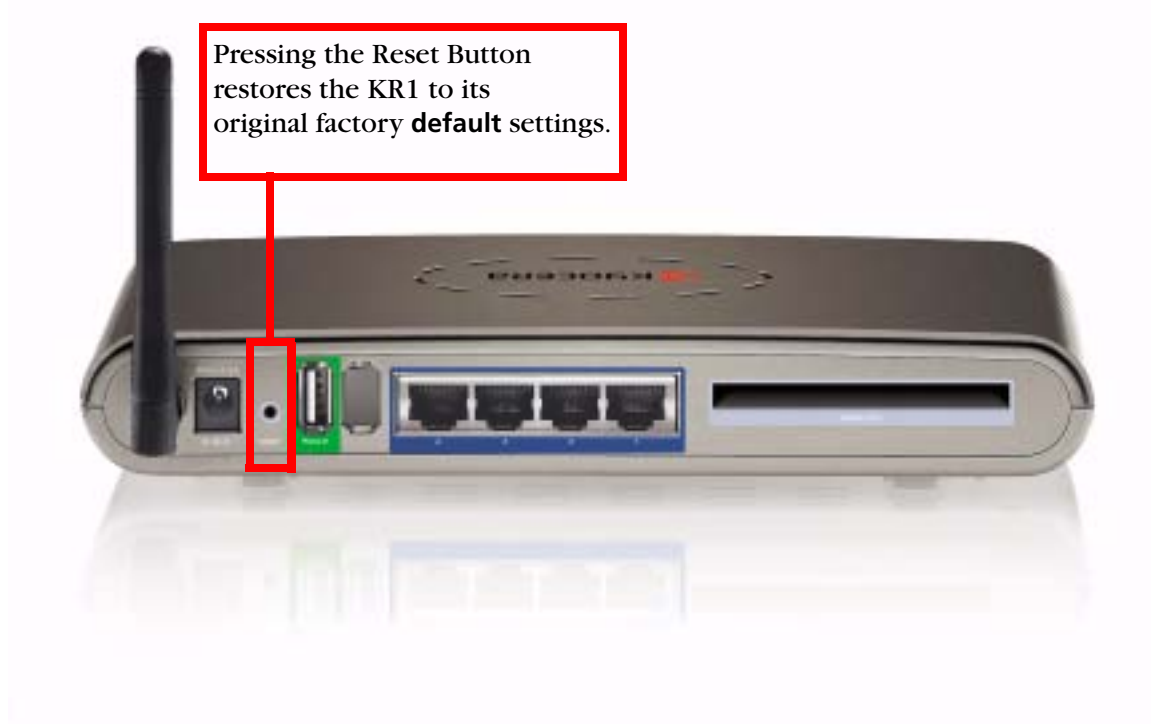

To hard-reset the Kyocera KR1 Mobile Router its factory **default** settings, follow the steps listed below:

1. Ensure the Kyocera KR1 Mobile Router is powered on
2. Locate the **Reset** button on the back of the Kyocera KR1 Mobile Router.
3. Use a paper clip to press the **Reset** button.
4. Hold for 10 seconds and then release.
5. After the Kyocera KR1 Mobile Router reboots, it is reset to the factory **default** settings.

Note: Please note that this process will take a few minutes.

8. What is VPN?

- VPN stands for "Virtual Private Networking." VPNs create a "tunnel" through an existing Internet connection using PPTP (Point-to-Point Tunneling Protocol) or IPSec (IP Security) protocols with various encryption schemes including Microsoft Challenge Handshake Authentication Protocol (MS-CHAP) .
- This feature allows you to use your existing Internet connection to connect to a remote site with added security.

If your VPN connection is not functional, verify that your VPN dial-up configuration is correct.

Note: This information should be provided to you from your VPN provider.

9. What can I do if my Ethernet cable does not work properly?

- First, ensure that there is a solid cable connection between the Ethernet port on the Kyocera KR1 Mobile Router, and your NIC (Network Interface Card).
- Second, ensure that the settings on your NIC adapter are “Enabled,” and set to accept an IP address from the DHCP.
- If settings appear to be correct, ensure that you are *not* using a crossover Ethernet cable. Although the Kyocera KR1 Mobile Router is MDI/MDIX compatible, not all NICs are. Therefore, it is recommended that you use a patch cable when possible.

7 Technical Support

Technical Support

D-Link provides free technical support for customers within the United States and within Canada for the warranty period of one year on this product.

D-Link Technical Support over the Telephone (U.S.):
(888) 351-5353

D-Link Technical Support over the Internet:
<http://support.dlink.com>

When contacting technical support, please provide the following information:

Note: All numbers referenced below can be found on the bottom of the Kyocera KR1 Mobile Router.

- Model number or product name. This is the ten-digit “TX” number.
- Serial number of the unit.
- Date code
- Firmware version

Note: The firmware version can be found by logging into the router and viewing the status page. For more information.

Kyocera Accessories

To shop for Kyocera KR1 Mobile Router accessories, visit <http://www.kyocera-wireless.com/store>.

8 Technical Specifications

Standards

- IEEE 802.11b/g
- IEEE 802.3
- IEEE 802.3u

VPN Pass Through/ Multi-Sessions

- PPTP
- IPSec

Device Management

- Web-Based- Internet Explorer v6 or later; Netscape Navigator v7 or later; or other Java-enabled browsers
- DHCP Server and Client

Advanced Firewall Features

- IP Filtering
- Scheduling
- NAT (Network Address Translation) with VPN Passthrough
- MAC Filtering

Wireless Operating Range

- Indoors - up to 328 feet (100 meters)
- Outdoors - up to 1312 feet (400 meters)

Operating Temperature

- 32°F to 131°F (0°C to 55°C)

Humidity:

- 95% maximum (non-condensing)

Safety and Emissions:

- FCC

Wireless Frequency Range:

- 2.4GHz to 2.462GHz

LEDs:

- Power
- Status
- WAN
- WLAN (Wireless Connection)
- LAN
- Phone

Physical Dimensions:

- L = 7.56 inches (192mm)
- W = 4.65 inches (118mm)
- H = 1.22 inches (31mm)

Wireless Transmit Power:

- 15dBm \pm 2dB

Security:

- 802.11b/ 802.11g
- WPA- WiFi Protected Access (64-,128-WEP with Shared Key Authentication)

External Antenna Type:

- Single detachable reverse SMA

Modulation Technology:

- Orthogonal Frequency Division Multiplexing (OFDM)

Power Input:

- **Ext. Power Supply DC 5V, 3.0A**

Weight:

- **10.8 oz. (0.3kg)**

Warranty:

- **1 year**

Wireless Data Rates with Automatic Fallback:

- **54 Mbps**
- **48 Mbps**
- **36 Mbps**
- **24 Mbps**
- **18 Mbps**
- **12 Mbps**
- **11 Mbps**
- **9 Mbps**
- **6 Mbps**
- **5.5 Mbps**
- **2 Mbps**
- **1 Mbps**

9 Consumer Limited Warranty (USA only)

Kyocera Wireless Corp. ("KYOCERA") offers you a limited warranty that the enclosed product or products (the "Product") will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end-user purchaser of the Product and provided that your purchase was made from an authorized supplier. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. This limited warranty is applicable only to end users in the United States and Canada.

KYOCERA shall, at its sole and absolute discretion, either repair or replace a Product (which unit may use refurbished parts of similar quality and functionality) if found by KYOCERA to be defective in material or workmanship, or if KYOCERA determines that it is unable to repair or replace such Product, KYOCERA shall refund the purchase price for such Product, provided that the subject Product (i) is returned, with transportation prepaid, to a KYOCERA authorized service center within the one year warranty period, and (ii) is accompanied by a proof of purchase in the form of a bill of sale or receipted invoice which evidences that the subject Product is within the one year warranty period ("Proof of Purchase"). After the one year warranty period, you must pay all shipping, parts and labor charges.

This limited warranty does not cover and is void with respect to the following: (i) any Product which has been improperly installed, repaired, maintained or modified; (ii) any Product which has been subjected to misuse (including any Product used in conjunction with hardware electrically or mechanically incompatible or used with accessories not approved by KYOCERA), abuse, accident, physical damage, abnormal operation, improper handling, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature; (iii) any Product operated outside published maximum ratings; (iv) cosmetic damage; (v) any Product on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) cost of installation, removal or reinstallation; (vii) signal reception problems (unless caused by defects in material and workmanship); (viii) damage the result of fire, flood, acts of God or other acts which are not the fault of KYOCERA and which the Product is not specified to tolerate, including damage caused by mishandling, shipping and blown fuses; (ix) consumables (such as fuses); or (x) any Product which has been opened, repaired, modified or altered by anyone other than KYOCERA or a KYOCERA authorized service center.

USE ONLY KYOCERA APPROVED ACCESSORIES WITH KYOCERA PHONES. USE OF ANY UNAUTHORIZED ACCESSORIES MAY BE DANGEROUS AND WILL INVALIDATE THE PHONE WARRANTY IF SAID ACCESSORIES CAUSE DAMAGE OR A DEFECT TO THE PHONE.

KYOCERA SPECIFICALLY DISCLAIMS LIABILITY FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, PUNITIVE, EXEMPLARY, AGGRAVATED, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EVEN IF ADVISED OF THE POSSIBILITY THEREOF, WHETHER FORESEEABLE OR UNFORESEEABLE OF ANY KIND WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, UNANTICIPATED BENEFITS OR REVENUE, ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT) OR CONTRIBUTION OR INDEMNITY IN RESPECT OF ANY CLAIM RELATED TO A PRODUCT.

REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT OR REFUND OF THE PURCHASE PRICE RELATING TO A DEFECTIVE PRODUCT, AS PROVIDED UNDER THIS WARRANTY, ARE YOUR SOLE AND EXCLUSIVE REMEDIES FOR BREACH OF THE LIMITED WARRANTY, AND SUBJECT TO THIS WARRANTY, THE PRODUCTS ARE APPROVED AND ACCEPTED BY YOU "AS IS". KYOCERA MAKES NO OTHER WARRANTIES, REPRESENTATIONS OR CONDITIONS OF ANY KIND, ORAL OR VERBAL, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, WITH RESPECT TO THE PRODUCTS, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OR CONDITION OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT OR ANY IMPLIED WARRANTY OR CONDITION ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. NO DEALER, DISTRIBUTOR, AGENT OR EMPLOYEE IS AUTHORIZED TO MAKE ANY MODIFICATION OR ADDITION TO THIS WARRANTY.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

For warranty service information, please call the following telephone number from anywhere in the continental United States and Canada: 1-800-349-4478 or 858-882-1401; or contact KYOCERA at the following address: 10300 Campus Point Drive, San Diego, California, 92121-1582, USA, Attention: Technical Support.

DO NOT RETURN YOUR PRODUCTS TO THE ABOVE ADDRESS. Please call or write for the location of the Kyocera Wireless Corp. authorized service center nearest you and for procedures for obtaining warranty service.